
 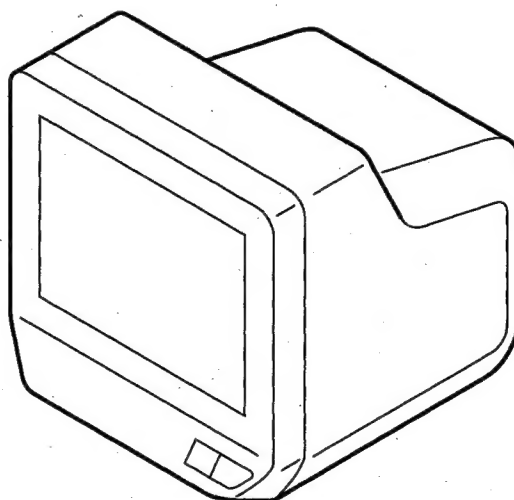


SERVICE MANUAL

BN-1 CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-9PT50	RM-Y116	US	SCC-J58A-A				
KV-9PT50	RM-Y116	CND	SCC-J59A-A				
KV-9PT60	RM-Y116	US	SCC-J58B-A				
KV-9PT60	RM-Y116	CND	SCC-J59B-A				



* Please file according to model size.■

TRINITRON® COLOR TV
SONY®

SPECIFICATIONS

Television system

American TV standard, NTSC color

Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

Screen size

9-inch picture measured diagonally

Antenna

VHF/UHF telescopic antenna

Speaker

77 mm round (3 1/8 inches), 1 W

Inputs

VIDEO: RCA phono-type 1 Vp-p,
75 ohms

AUDIO: RCA phono-type monaural

VHF/UHF (Combined CATV/VHF/
UHF 75-ohm, F-type)

Output

Headphone jack (monaural)

Dimensions

Power requirements

KV-9PT50: 120 V AC, 60 Hz

KV-9PT60: 120 V AC, 60 Hz, 12 V DC

Power consumption

KV-9PT50: AC IN 53 W max.

KV-9PT60: AC IN 53 W max.

DC IN 53 W max.

Mass

KV-9PT50: 5.5 kg (12 lb 2 oz)

KV-9PT60: 5.7 kg (12 lb 9 oz)

Supplied accessories

Remote commander RM-Y116



Size AA batteries (2)

Telescopic antenna (1)


KV-9PT50 only: Dual mode swivel
bracket (1), Attachment parts (1), Paper
pattern (1)

KV-9PT60 only: AC power cord (1), Car
battery cord DCC-22AW (1)

Design and specifications are subject to
change without notice.

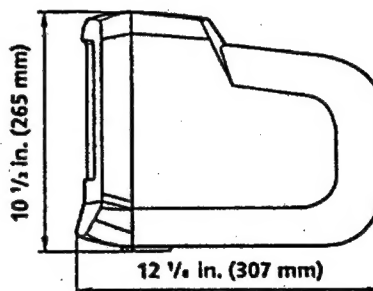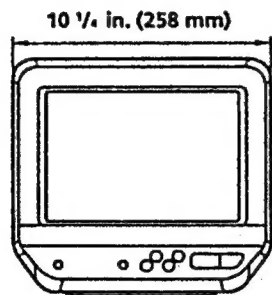

When the bracket is attached to
the upper part of the TV

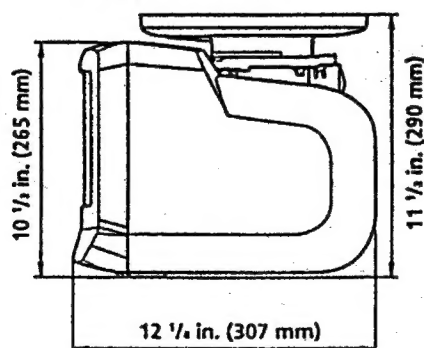

When the bracket is attached
to the lower part of the TV

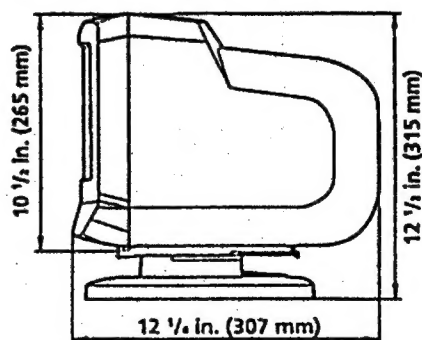


TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
1. GENERAL					
	Setting up the KV-9PT50	5		1. METHOD OF SETTING THE SERVICE	
	Setting up the KV-9PT60	8		ADJUSTMENT MODE	24
	Connections	9		2. MEMORY WRITE CONFIRMATION METHOD	24
	Setting up the Remote Commander	10		3. ADJUST BUTTONS AND INDICATOR	25
	Setting cable TV on or off	10		4. AN ITEM OF ADJUSTMENTS	25
	Presetting Channels	11		H. FREQUENCY ADJUSTMENT (H FRE)	26
	Functions	12		V. FREQUENCY ADJUSTMENT (V FRE)	26
	Adjustment the Picture	13		CHROMA TRAP (CROM)	26
	Customizing the Channels Number Buttons	14		SUB PICTURE (SPIX)	27
	Blocking out a Channel (CHANNEL BLOCK)	15		SUB HUE, SUB COLOR (SHUE, SCOL)	27
	Troubleshooting	16		V. CENTER (VPOS)	28
2. DISASSEMBLY				H. CENTER (HPOS)	28
	2-1. Chassis Assy Removal	17		V. LINE (VLIN), V. CORRECTION (VSCO)	28
	2-2. Service Position	17	5. SAFETY RELATED ADJUSTMENTS		29
	2-3. A Board Removal	17	6. DIAGRAMS		
	2-4. F Board Removal	17		6-1. Block Diagrams (1)	31
	2-5. Picture Tube Removal	18		Block Diagrams (2)	33
3. SET-UP ADJUSTMENTS				6-2. Circuit Boards Location	36
	BEAM LANDING	19		6-3. Printed Wiring Board and Schamatic Diagrams	36
	CONVERGENCE	20		• A Board	39
	(1) Horizontal and Vertical Static Convergence			• C Board	43
	Adjustment	20		• F Board	43
	(2) Dynamic Convergence Adjustment	22		6-4. Semiconductions	45
	(3) Screen-corner Convergence Adjustment	22	7. EXPLODED VIEWS		
	FOCUS	22		7-1. Chassis	46
	METHOD OF SETTING THE SERVICE		8. ELECTRICAL PARTS LIST		47
	ADJUSTMENT	23			
	SCREEN (G2)	23		(ATTENTION)	
	WHITE BALANCE ADJUSTMENTS	23		APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT- CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.	
4. CIRCUIT ADJUSTMENTS				ATTENTION!!	
	ELECTRICAL ADJUSTMENTS BY REMOTE			AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS DUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.	
	COMMANDER	24		ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!	
	(CAUTION)			LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE ! SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.	
	SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.				
	WARNING!!				
	AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.				
	SAFETY-RELATED COMPONENT WARNING!!				
	COMPONENTS IDENTIFIED BY SHADING AND MARK ! ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.				

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT540A. Follow the manufacturers' instructions to use these instruments.
2. A battery operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low voltage scale. The Simpson 250 and Sanwa SH63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold water pipe is guaranteed earth ground; the cover plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold water pipe with an ohmmeter. The reading should be zero ohms. If a cold water pipe is not accessible, connect a 60/100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

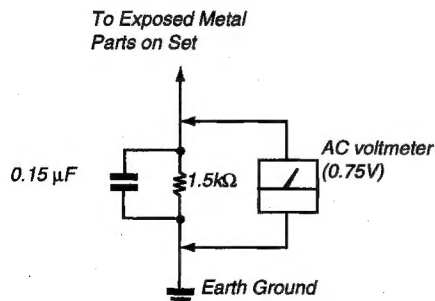


Fig. A. Using an AC voltmeter to check AC leakage.

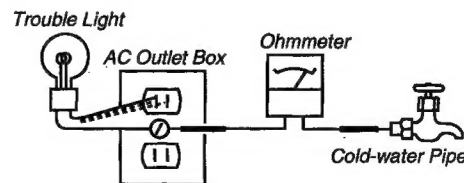


Fig. B. Checking for earth ground.


SECTION 1 GENERAL

Setting Up

Setting up the KV-9PT50

Attaching the TV

You can install the TV to the stand (bracket) in two ways with the supplied dual mode swivel bracket.

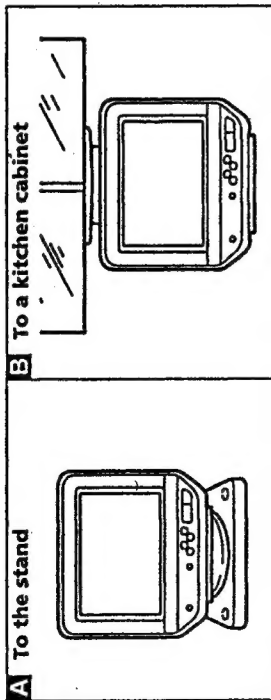


Caution


Do not install the TV with wet hands, or touch the TV and bracket with wet hands.

A To attach the TV to the stand

 1 While holding up the lever, push the slider in the direction of the arrow.



2 Turn the TV sideways, attach the stand to the TV so that the four claws of the slider fit in the square-holes on the bottom of the TV.

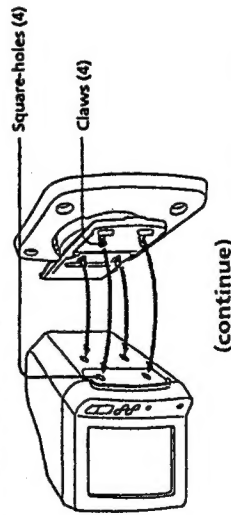


Setting up

5EN


The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

3 ① Push the base in the direction of the arrow ① until the two rear claws on the slider touch the back of the square-holes on the bottom of the TV.

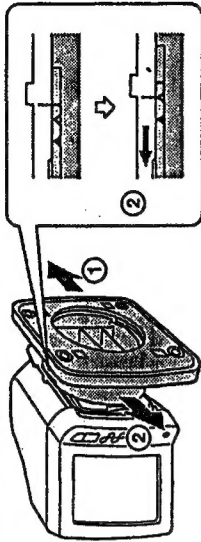

② To lock the bracket and the TV, pull the slider in the direction of the arrow ② while holding up the lever without moving the base.

4 You can rotate the TV about 60° in either direction.

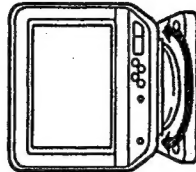

B To attach the TV to a kitchen cabinet

To install the TV to a kitchen cabinet, attach the supplied shelf installation bracket using the attachment parts shown below. The bracket attachment instructions differ depending on the cabinet type (flush or overhanging). Follow the instructions that match your cabinet type.

Attachment parts (supplied)


A	B	C	D	E	F
M6 x 40 Phillips screws (4)	M6 x 70 Phillips screws (4)	Resin washers (4)	M6 nuts (L=5) (4)	Spacers (L=30) (4)	Stopper (1)

Lay the supplied paper pattern on the base of the cabinet (inside or outside), to ensure the proper 4 inches (101.4 mm) distance between the wall and the bracket. Drill 4 holes (diameter: 9/32 inches, 7 mm) where indicated on the pattern. Attach the shelf installation bracket as shown on the following pages.

Setting up

6EN


Attaching to a flush type cabinet

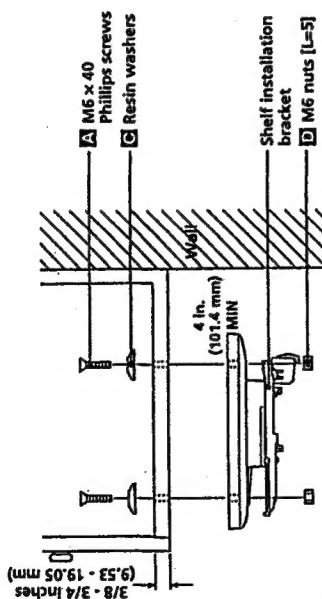

Notes

- You cannot attach the shelf installation bracket to a cabinet with a base thickness of less than 3/8 inches (9.53 mm).
- If the cabinet base thickness is over 3/4 inches (19.05 mm), purchase longer screws (#10-32) and nuts at a hardware supply store.

Attaching to an overhanging type cabinet

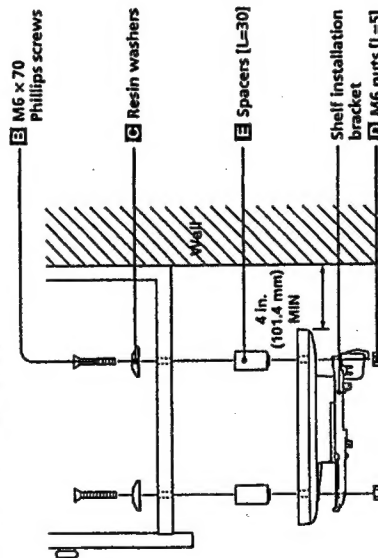


Notes

- The spacer is not needed for the cabinet with an overhang of 0 - 1 inch (0 - 25.4 mm).
- The spacer is needed for the cabinet with an overhang of 1 - 2 inches (25.4 - 51 mm).
- You cannot attach the shelf installation bracket to cabinet with an overhang of over 2 1/8 inches (51 mm).

Cautions

- When using the shelf installation bracket to attach the TV to a kitchen shelf or cabinet, be sure that the bracket is attached level to the shelf or cabinet base. If the TV is installed to a bracket that is not level, it may fall from the bracket.
- To reduce the risk of fire, do not place any heating or cooking appliance beneath TV.


1 Attach the stopper to the slider.

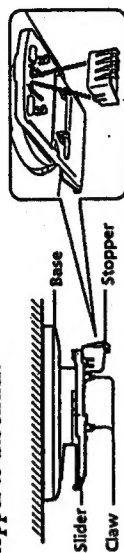


2 While holding down the lever, pull the slider in the direction of the arrow.



3 Attach the TV temporarily to the slider so that two claws of the bracket base fit in the square-holes located inside of the TV's knob.

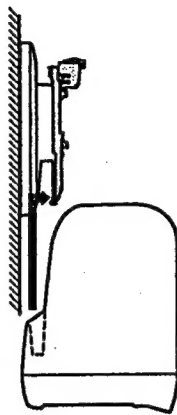


4 While holding down the lever, push the slider in the direction of the arrow so that the claws of the stopper fit in the ventilation hole of the TV' cabinet.

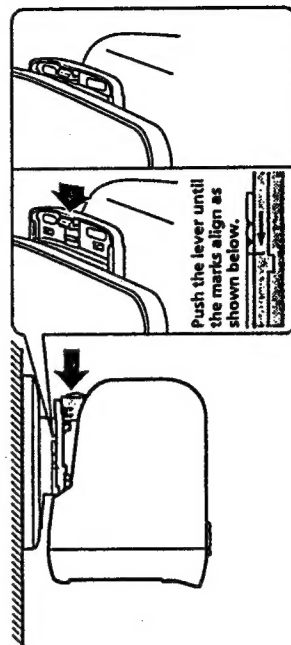

Make sure that the bracket and the TV are locked completely.

- 5** You can rotate the TV about 60° in either direction. Be sure to rotate the TV slowly and gently.

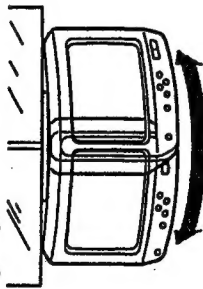


Caution

- Take care that a child does not hang on the TV or pull it forcibly.

Removing the TV


- A To remove the TV from the stand**

- 1** While holding up the lever, push the slider in the direction of the arrow to unlock the bracket and the TV.
- 2** Remove the TV from the stand.

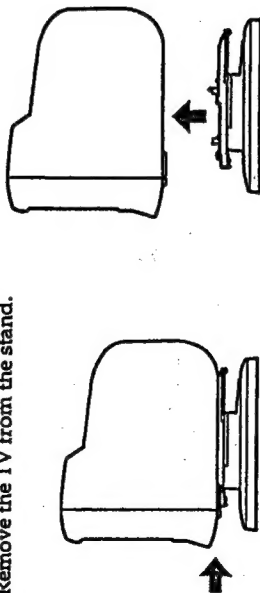

- B To remove the TV from the bracket**

- 1** While holding down the lever, pull the slider in the direction of the arrow to unlock the bracket and the TV.
- 2** Pull the TV toward you to remove the TV from the bracket.

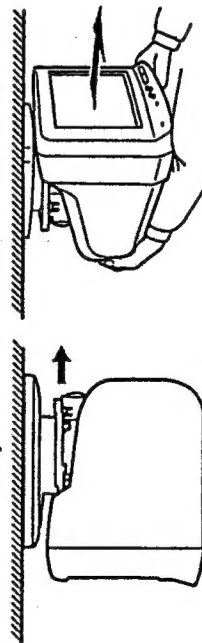


Caution

- If you do not support the TV as illustrated, the TV may fall when it separates from the bracket.

Setting up

9EN


Using house current

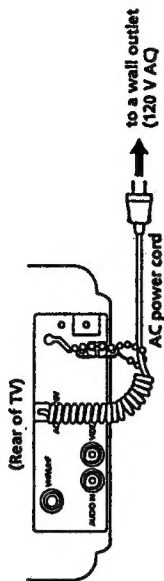


Connecting the supplied telescopic antenna

- 1** Insert the antenna into the receptacle on the TV, and twist to ensure a secure fit.


When attaching the TV to the stand (table use)

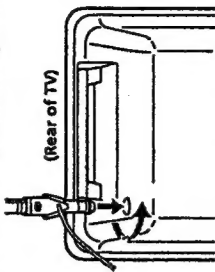

When attaching the TV to the kitchen cabinet

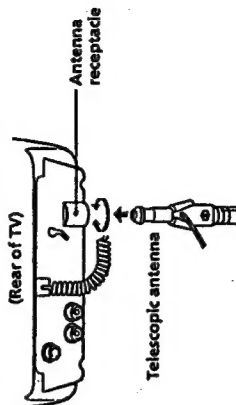

- 2** Attach the antenna connector to the VHF/UHF terminal.

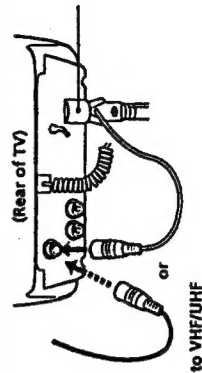


10EN


Setting up

Setting up the KV-9PT60

Using house current

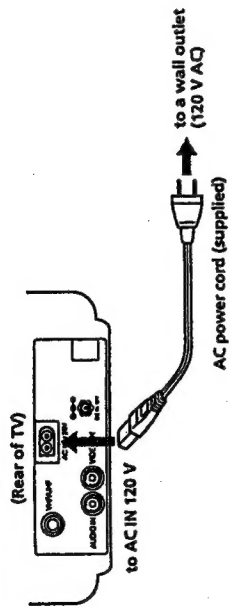

Using a car battery

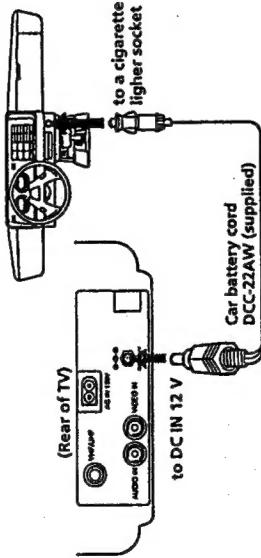

Notes


- For car use, the TV is designed for negative ground 12 V DC operation only.
- Use only the supplied car battery cord manufactured by Sony. Polarity of the plugs of other manufactures may be different.




- When you aren't using the TV, remove the car battery cord from the cigarette lighter socket.

Connecting the supplied telescopic antenna

- 1 Insert the antenna into the receptacle on the TV, and twist to ensure a secure fit.

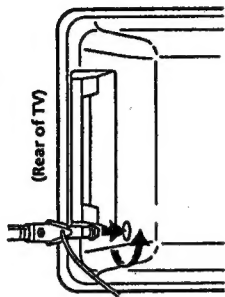

- 2 Attach the antenna connector to the VHF/UHF terminal.

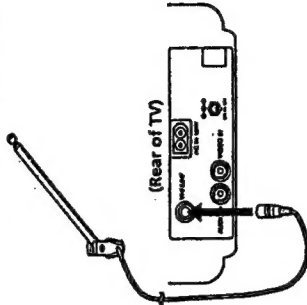

Connections


Select one of the two ways to connect the TV to the antenna and/or cable system. It is recommended to connect an outdoor antenna or a cable TV system for better picture quality.

Connecting to outdoor antenna


Connect the antenna cable to the VHF-UHF antenna terminal. If the antenna cable cannot be connected directly to the jack, follow one of the diagrams below, depending on the type of cable you have.

Notes

- Do not use tools to attach the cable to the VHF/UHF terminal. Doing so may damage the terminal.
- Most VHF/UHF combination antennas have a signal splitter. Remove the splitter before attaching the appropriate connector.
- If the U/V mixer is used, snow and noise may appear in the picture when viewing cable TV channels over 37.

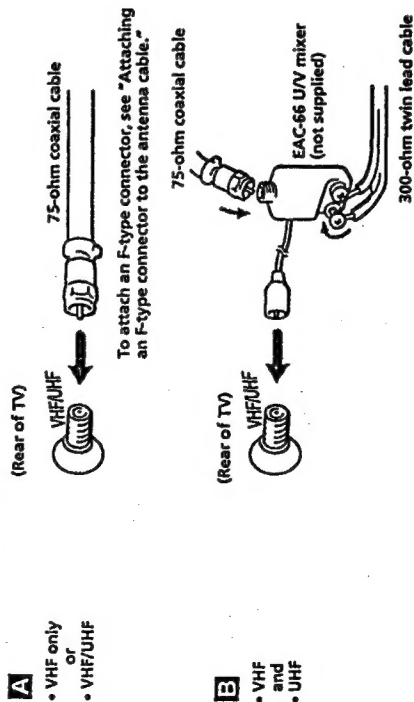


Attaching an F-type connector to the antenna cable

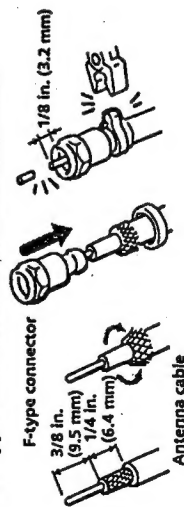

Connecting to cable TV system


If your cable company requires you to connect a cable box, follow example **A**. If not, follow example **B**.

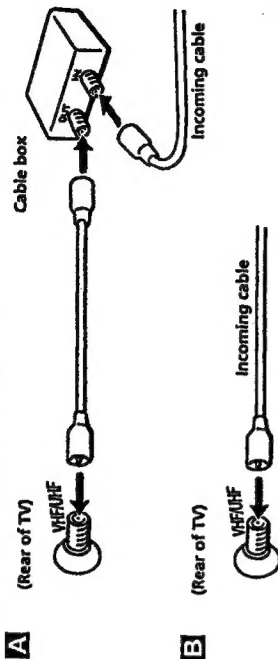

Connecting video equipment

Before connecting, turn off the power on all equipment.

Connecting a VCR or 8mm video camera

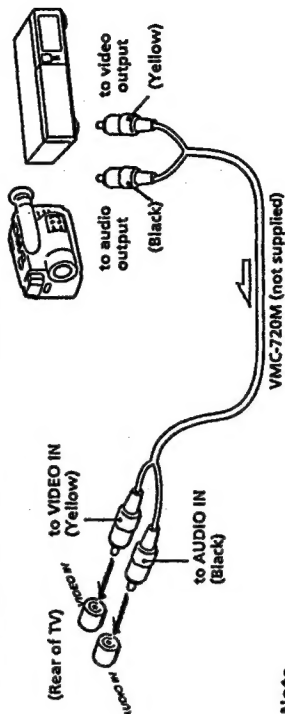

Note

When connecting stereo equipment, use the VMC-920MS (not supplied) connecting cable (stereo \leftrightarrow monaural).

Watching a VCR picture

- 1 Turn on the TV.
- 2 Press TV/VIDEO so that "VIDEO" appears on the screen.

To return to TV mode

Press TV/VIDEO so that a channel number appears on the screen.

14EN

Setting up

13EN

Setting up

Setting up the remote commander

Install two size AA batteries (supplied) as shown.



Notes

- Match the + and - on the batteries to the diagram inside the battery compartment.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not handle the remote commander roughly. Do not drop it, step on it or let it get wet.
- Do not place the remote commander in direct sunlight, near a heater, or where the humidity is high.

Instructions in this manual are based on the remote commander. You can also use the controls on the TV if they have the same name as those on the remote commander.

Setting cable TV on or off

If the TV is connected to a cable TV system, then the factory setting CABLE ON is correct. If the TV is not connected, set CABLE to OFF.

Note

If more than 90 seconds elapse after you press a button, the menu disappears automatically.


1 Press MENU.

The main menu appears.



2 Press Δ+ or V- on the remote commander to move the cursor (▸) on the screen to SET UP. To select that function, press RETURN.

The SET UP menu appears.

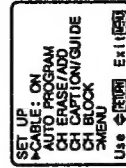

Note

If CABLE appears in black, the TV is set to video input and CABLE cannot be selected. Press TV/VIDEO so that a channel number appears.

3 Set CABLE to ON or OFF.


(1) If the cursor is not beside CABLE, press Δ+ or V- to move the cursor and press RETURN.



(2) Press Δ or ∇ to select ON or OFF.



(3) Press RETURN.

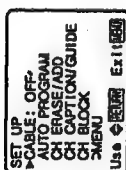

4 Press MENU to return to the original screen.




Presetting channels

TV channels can be preset easily; first, store all the receivable channels automatically by following the procedure below. Next, erase unwanted channels or add additional channels. Preset channels during the day rather than late at night, when some channels may not be broadcasting.

1 Press MENU.

2 Press Δ or ∇ on the remote commander to move the cursor (\blacktriangleright) on the screen to SET UP and press RETURN.
The SET UP menu appears.

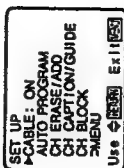


Note


If AUTO PROGRAM appears in black, the TV is set to video input and AUTO PROGRAM cannot be selected. Press TV/VIDEO so that a channel number appears.

3 Select AUTO PROGRAM.

(1) Press Δ or ∇ to move the cursor (\blacktriangleright) to AUTO PROGRAM.

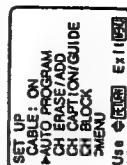

(2) Press RETURN.

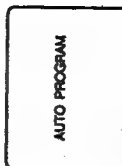

"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

Functions

Note

If "VIDEO" appears on the screen, press TV/VIDEO so that a channel number appears.

Selecting a channel directly

Press the 0-9 buttons to select a channel. Or press ENTER after entering the channel for immediate selection.



To scan through channels

Press CH +/- until the channel you want appears.



Switching quickly between two channels


Press JUMP.

The channel you watched previously appears. Pressing JUMP again switches back to the original channel.



Adjusting the volume

Press VOL +/- to adjust the volume.

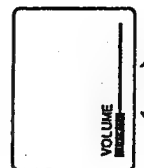

Erasing or adding channels

1 Press MENU.


2 Press Δ+ or ∇- to select SET UP and press RETURN.

3 Press Δ+ or ∇- to select CH ERASE/ADD and press RETURN.

4 To erase an unwanted channel:

- (1) Press CH +/- to select the channel you want to erase.
- (2) Make sure the cursor (▶) is beside ERASE.

Channel to be erased

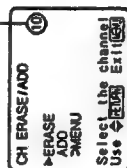

(3) Press RETURN.

The indication "-" appears beside the channel number, showing that the channel is erased from the preset memory.


Note

You can select the erased channel using the 0-9 buttons.

To add a channel that you want:

- (1) Press 0-9 buttons to select the channel you want to add and press ENTER.
- (2) Press Δ+ or ∇- to select ADD.

Channel to be added

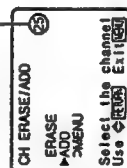

(3) Press RETURN.

The indication "+" appears beside the channel number, showing that the channel is added to the preset memory.

5 To erase and/or add other channels, repeat step 4.

6 When finished, press MENU.

Note

If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.

Muting the sound

Press **MUTING**.

"MUTING" appears on the screen.



To restore the sound, press **MUTING** again, or press **VOL +**.

Displaying on-screen information

Use this feature to check your channels.
Press **DISPLAY**.



To cancel the display, press **DISPLAY** again.

Setting the Sleep Timer

The TV stays on for the length of time specified and then shuts off automatically.

Press **SLEEP** repeatedly until the time (minutes) wanted appears. Each time you press **SLEEP**, the time changes as follows: 30 → 60 → 90 → OFF. "SLEEP" appears on the screen one minute before the TV power is shut off.



To cancel the Sleep Timer, press **SLEEP** repeatedly until "SLEEP OFF" appears, or turn the TV off.

Listening with headphones

Plug the headphones into the headphone jack.

The sound from the speaker is shut off and the monaural sound will be heard from the headphones. To adjust the headphones volume, press **VOL +/-**.



Available Features

21EN

Adjusting the picture

When watching TV programs, the quality of the picture can be adjusted to suit your taste.

1 Press **MENU**.

2 Make sure the cursor (▶) is beside **VIDEO** and press **RETURN**.



3 Select the item to adjust. See chart on following page for details on results of adjustments. For example:
To adjust brightness, press **Δ+** or **∇-** to select **BRIGHT** and press **RETURN**.



4 Adjust the level:

(1) Press **Δ+** or **∇-** to adjust the level.



(2) Press **RETURN**.

The new setting appears in the **VIDEO** menu.

5 To adjust other items, repeat steps 3 and 4 above.

22EN

Available Features

Description of adjustable items

Item	Adjustment	
	Press Δ + to	Press ∇ - to
PICTURE	Increase picture contrast for vivid color	Decrease picture contrast for soft color
HUE	Make skin tones become greenish	Make skin tones become purplish
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture

To restore the factory settings

Press RESET while the VIDEO menu is displayed. All the settings except PICTURE are restored to factory settings.

Adjusting the picture when watching video tapes

You can adjust the picture of the video input as well. These settings are stored separately from those for the TV picture.

To adjust the video picture, first press TV/VIDEO to set to video input, then follow the procedure on the previous page.

Customizing the channel number buttons


Up to 12 channels can be captioned and assigned to a specific channel number button for each channel. This feature allows the easy selection of your favorite channels by name. For example, select channel 17 "ESPN," and assign the channel number 2 button to it.

Setting captions to a favorite channel


- 1** Press MENU.
- 2** Press Δ or ∇ to select SET UP and press RETURN.
- 3** Press Δ or ∇ to select CH CAPTION/GUIDE and press RETURN.




- #### 4 Press RETURN again.

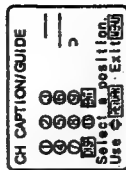

- 5** Press Δ or ∇ —to select a channel guide number (chosen number will appear in red) and press RETURN. For example, select 2 as the channel guide number. Numbers 0-9, DISPLAY and ENTER buttons are available for use as a channel guide number. The channel number button you select will be the one you press to call up your favorite channel.

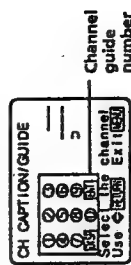

- 6** Press Δ or ∇ —to select the channel that you want to caption and press RETURN. For example, select channel 17.

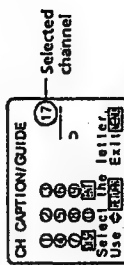


Enter the letters (up to four) to caption the channel:


- (1) Press Δ or ∇ to select the first letter.**

Each time you press $\Delta+$ or $\nabla-$, the letter changes as shown below.

 0 ↔ 1 ↔ ... ↔ 9 ↔ A ↔ B ↔ ... ↔ Z ↔ ... ↔ Z ↔ & ↔ / ↔ ↔ ↔ _ (blank space)



- (3) Repeat steps (1) and (2) to select the remaining letters and press RETURN.**

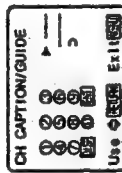

- 8 Repeat step 4 to 7 to caption other channels.**

To cancel a setting

Select the channel you want to cancel in step 5, then press RESET.

Selecting a captioned channel

- 1 Press CH GUIDE.**
The CHANNEL GUIDE menu appears showing channel captions and the corresponding channel number buttons.
- 2 Press a channel number button, the DISPLAY or ENTER button to select the channel you want.**

**To cancel the CHANNEL GUIDE menu
Press CH GUIDE again.**


Blocking out a channel (CHANNEL BLOCK)

This feature allows you to prevent children from watching unsuitable programs.


- 1** Press **MENU**.
- 2** Press **Δ** or **V** to select **SET UP** and press **RETURN**.
- 3** Press **Δ** or **V** to select **CH BLOCK** and press **RETURN**.



- 4** Select the channel you want to block.
(1) Press Δ or ∇ to select program 1 or 2 and press RETURN.
The selected channel indication turns red.

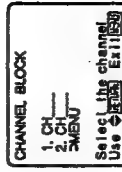

- (2) Press Δ or ∇ —to select the channel you want to block and press RETURN.

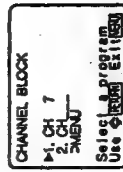

- 5 Repeat step 4 to 5 to block other channels.**

If you select the blocked channel when watching the TV, "BLOCKED" appears and the picture is blocked and the sound is muted.

To cancel a channel block
Press RESET in step 3.


Troubleshooting

If trying the remedies below, the problem is not corrected, contact your nearest Sony dealer.


Problem	Adjustment
Poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> • Adjust PICTURE in the VIDEO menu. • Adjust BRIGHT in the VIDEO menu. • Check antenna/cable connections.
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Make sure the power cord is connected securely. • Check to see if the TV/VIDEO setting is correct. When watching TV, set to TV, and when watching video tapes, set to VIDEO or the channel you use for watching video. • Try another channel. It could be station trouble.
No color	<ul style="list-style-type: none"> • Adjust COLOR in the VIDEO menu. • Black and white programs cannot be seen in color.
Only snow and noise appear on the screen	<ul style="list-style-type: none"> • Check the CABLE setting in the SET UP menu. • Check the antenna/cable connection. • Make sure the channel is broadcasting programs.
Dotted lines or stripes	<ul style="list-style-type: none"> • Adjust the antenna. • Move the TV away from noise sources such as cars, neon signs, and hair-dryers.
Double images or ghosts	<ul style="list-style-type: none"> • Use a highly directional outdoor antenna or a cable TV cable (when the problem is caused by reflections from nearby mountains or tall buildings).
The picture is distorted (DC operation)	<ul style="list-style-type: none"> • When the car battery voltage drops too low, the picture may be distorted. Use the TV with the engine running.
Cannot operate menu	<ul style="list-style-type: none"> • The menu disappears automatically when 90 seconds elapse after you press a button. • If the menu items appear in black, the TV is set to video input and you cannot operate the menu. Press TV/VIDEO until a channel number appears.
The remote commander does not operate	<ul style="list-style-type: none"> • Insert the batteries in the remote commander with the correct polarity. • Replace the batteries with new ones if they are weak. • If there is a fluorescent light close to the TV, move it at least 3-4 feet away from the TV.
The TV needs to be cleaned.	<ul style="list-style-type: none"> • Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.

SECTION 2 DISASSEMBLY


2-1. CHASSIS ASSY REMOVAL

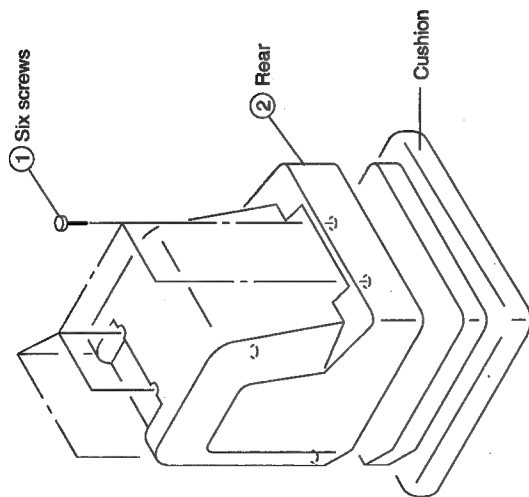


2-3. A BOARD REMOVAL

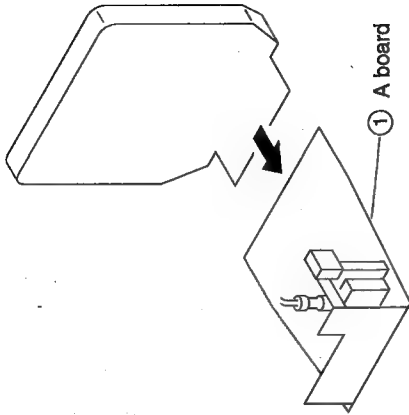


2-4. F BOARD REMOVAL

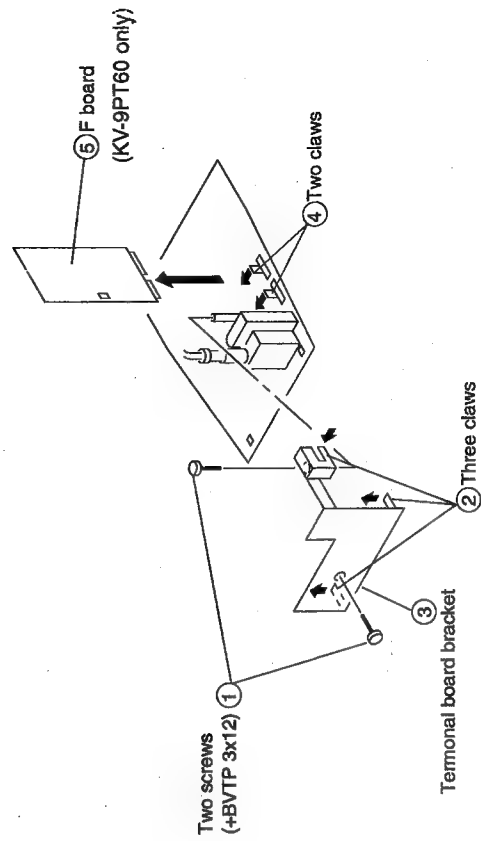

2-2. SERVICE POSITION

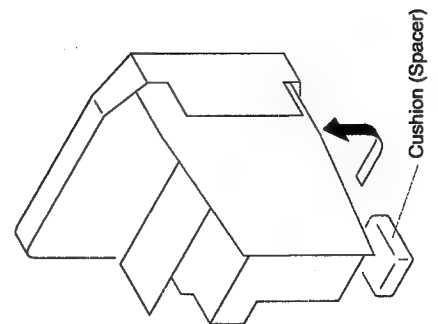


2-5. PICTURE TUBE REMOVAL

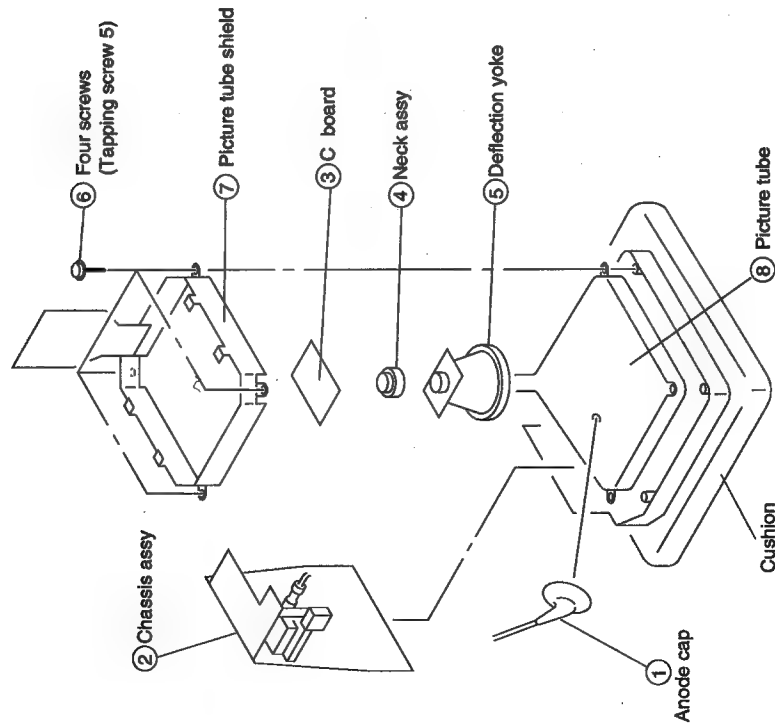


• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis. CRT chield or carbon painted on the CRT, after removing the anode.


• REMOVING PROCEDURES

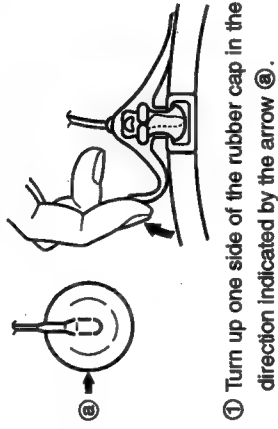

① Turn up one side of the rubber cap in the direction indicated by the arrow ①.

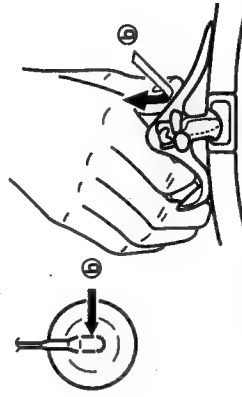


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.

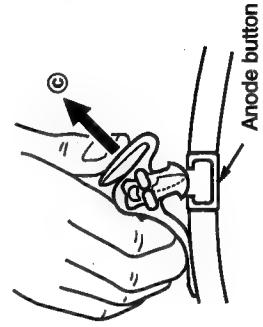




③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.


• HOW TO HANDLE AN ANODE-CAP


- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps! A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

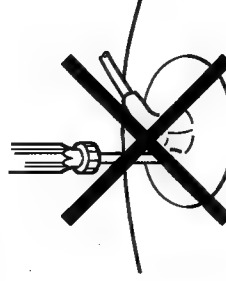


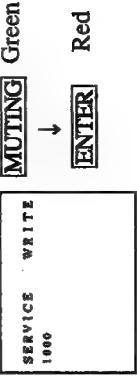
SECTION 3 SET-UP ADJUSTMENTS

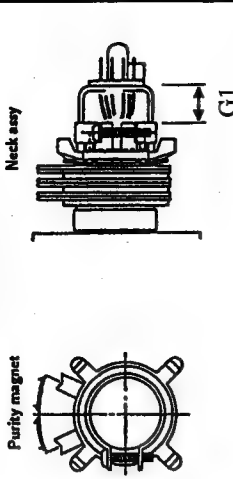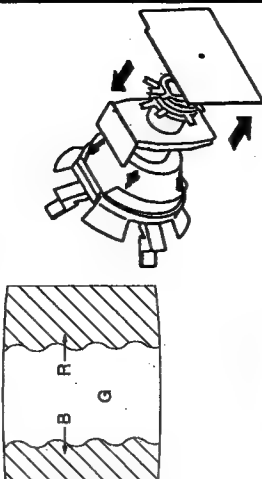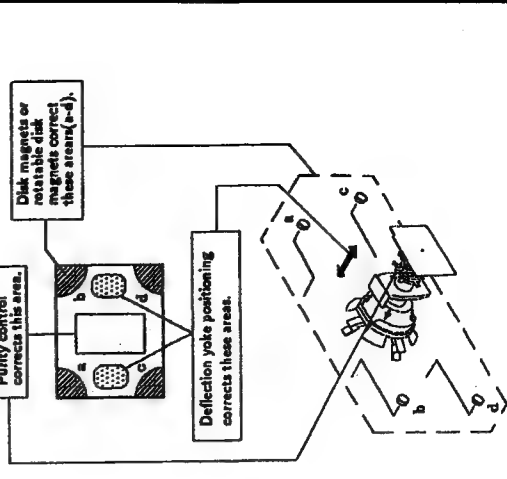ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ul style="list-style-type: none"> ● The following adjustments should be made when a complete realignment is required or a new picture tube is installed. ● These adjustments should be performed with rated power supply voltage unless otherwise noted. <p>The controls and switch should be set as follows unless otherwise noted :</p> <p>PICTURE control normal</p> <p>BRIGHTNESS control normal</p> <p>Preparation:</p> <ul style="list-style-type: none"> ● In order to reduce the influence of geomagnetism on the set's picture tube face it east or west. ● Switch on the set's power and degauss with the degausser. 				 <p>Purity magnet</p> <p>Neck easy</p> <p>G1</p>
<p>BEAM LANDING</p> <ol style="list-style-type: none"> 1. Input a white pattern signal with the pattern generator. 2. Position neck ass'y as shown in Fig. 3. Loosen the deflection yoke mounting screw, and set the purity control to the center. 4. Turn the green pattern signal of the pattern generator to green. 5. Move the deflection yoke backward, and adjust with the purity control so that green is in the center and red and blue are at the sides evenly. 6. Move the deflection yoke forward, and adjust so that the entire screen becomes green. 7. Switch over the raster signal to red and blue and confirm the condition. 8. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw. 9. When landing at the corner is not right, adjust by using the disk magnets. 	<p>White Pattern</p> <p>Green Pattern</p>		<p>Purity Control</p> <p>Deflection Yoke</p>	 <p>Purity control corrects this area.</p> <p>Deflection yoke positioning corrects these areas.</p> <p>Slide magnets or rotate this disk; magnets correct these areas (a-d).</p>
			Disk Magnets	

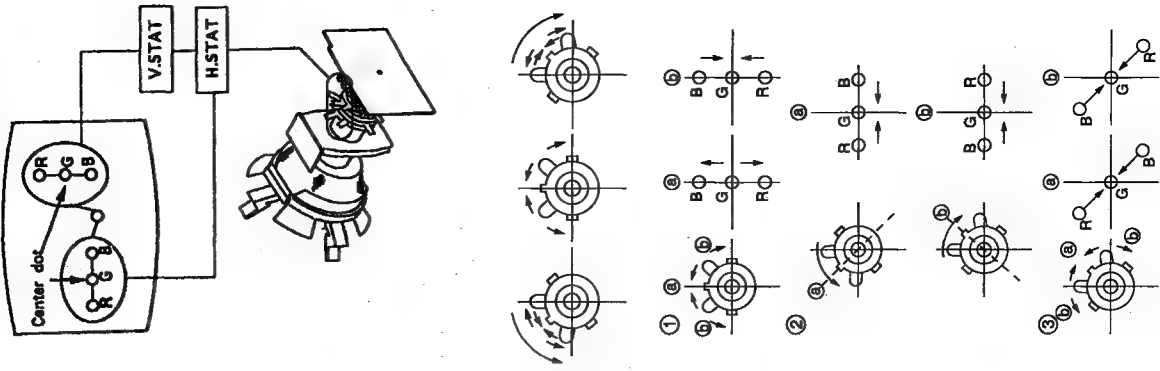ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>CONVERGENCE</p> <p>Preparation:</p> <ul style="list-style-type: none"> ● Before starting, perform FOCUS, V. LIN and V. SIZE adjustments. ● Set BRIGHTNESS control to minimum. ● Feed in dot pattern signal. <p>(1) Horizontal and Vertical Static Convergence</p> <p>Adjustment</p> <ol style="list-style-type: none"> 1. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen. 2. (Moving horizontally), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen. <ul style="list-style-type: none"> • Tilt the V.STAT magnet and adjust static convergence by opening or closing the V.STAT magnet. <ol style="list-style-type: none"> 3. When the V-static magnet is moved in the direction of arrow ㉓ and ㉔, red, green and blue dots move as shown below. 	Dot Pattern		V. STAT Magnet	

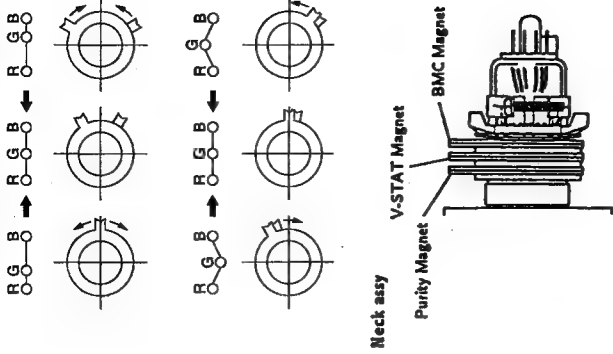ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ul style="list-style-type: none"> ● Operation of BMC Magnet ● The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking. Use the V-static tabs to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction). ● Y separation axis correction magnet adjustment <ol style="list-style-type: none"> 1. Receive a cross hatch signal, and adjust PICTURE and BRIGHTNESS. 2. Adjust the deflection yoke to the upright condition when it hits the CRT. 3. Adjust so that the Y separation Axis correction magnet on the neck assembly is symmetrical at the top and bottom (open state). 4. Return the deflection yoke to its original position. 			BMC Magnet	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>(2) Dynamic Convergence Adjustment</p> <p>Preparation:</p> <ul style="list-style-type: none"> ● Before starting perform Horizontal and Vertical static convergence Adjustment. <ol style="list-style-type: none"> 1. Slightly loosen deflection yoke screw. 2. Remove deflection yoke spacers. 3. Move the deflection yoke for best convergence as shown below. 4. Tighten the deflection yoke screw. 5. Install the deflection yoke spacers. 			Deflection Yoke	
<p>(3) Screen-corner Convergence Adjustment</p> <p>a-b : screen-corner misconvergence</p> <p>Affix a Permalloy ass'y corresponding to the misconverged areas</p>			Permalloy Ass'y	<p>Permalloy assembly</p>
<p>FOCUS</p> <ol style="list-style-type: none"> 1. Receive the broadcasting picture and adjust the picture quality with the menu. 2. Adjust FOCUS control(FBT) for best picture. 			FOCUS control	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
METHOD OF SETTING THE SERVICE ADJUSTMENT SERVICE MODE PROCEDURE 1. Standby mode. (Power off) 2. DISPLAY → 5 → VOL (+) → POWER on the *Remote Commander. Press each button within a second. 3. The CRT display the item Being adjusted. 4. Press 1 or 4 on the Remote Commander to select the item. 5. Press 3 or 6 on the Remote Commander to change the data. 6. Press MUTING then ENTER to write into memory. 7. Press 8 then ENTER on the Remote Commander to initialize. 8. Turn set off and on to exit.				SERVICE ADJUSTMENT MODE IN 
SCREEN (G2) 1. Input a dot pattern signal. 2. Adjust PICTURE, BRIGHTNESS controls. 3. Connect R, G and B of the C board cathode to the oscilloscope. 4. Adjust G2 (FBT) volume to the value below. 5. Press MUTING and ENTER to write the data in the memory.	Dot pattern Oscilloscope	cathodes	PICTURE normal BRIGHTNESS normal S BRT G CUT B CUT RV702 SCREEN (G2)	SERVICE ADJUSTMENT MODE MEMORY 
WHITE BALANCE ADJUSTMENTS 1. Input a entire white signal. 2. Set to service adjustment mode. 3. Set the PICTURE, BRIGHTNESS controls. 4. Adjust with S BRT if necessary. 5. Select G CUT and B CUT with 1 and 4 . 6. Adjust with 3 and 6 for the best white balance. 7. Set the PICTURE and BRIGHTNESS to maximum. 8. Select G AMP and B AMP with 1 and 4 . 9. Adjust with 3 and 6 for the best white balance. 10. Write into the memory by pressing MUTING then ENTER .	Entire White Pattern		PICTURE minimum BRIGHTNESS normal S BRT G CUT B CUT PICTURE maximum BRIGHTNESS maximum G AMP B AMP	

SECTION 3 CIRCUIT ADJUSTMENTS

ELECTRICAL ADJUSTMENTS BY REMOTE COMMANDER

Use of Remote Commander (RM-Y116) can be performed circuit adjustments about this model.

NOTE : Test Equipment Required.


1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

SERVICE MODE PROCEDURE


1. Standby mode. (Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **POWER** on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN

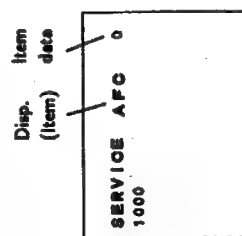

3. The CRT displays the item Being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. If you want to recover the latest values press **0** then **ENTER** to lead the memory.
7. Press **MUTING** then **ENTER** to write into memory.


SERVICE ADJUSTMENT MODE MEMORY

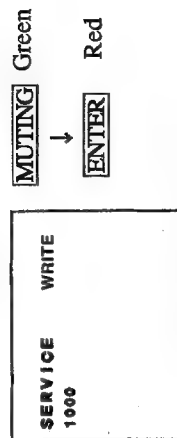

2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again, confirm they were adjusted.

3. ADJUST BUTTONS AND INDICATOR

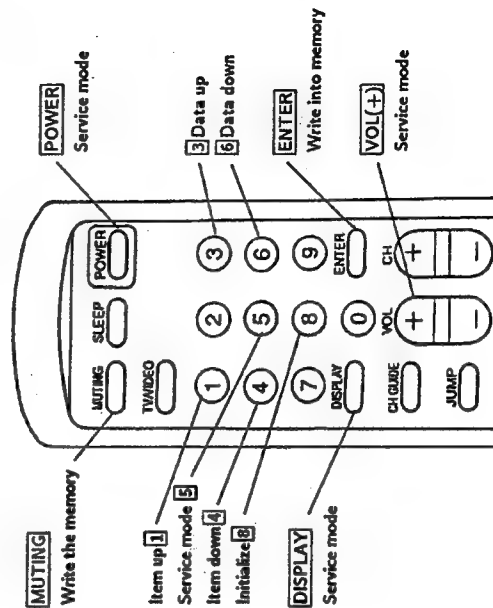

RM-Y116

4. AN ITEM OF ADJUSTMENTS

VP

No.	Disp.	Item	Data range	Ave. data
00	AFC	AFC Loop Gain 0 : M 1 : S 2 : L 3 : OFF	0 ~ 3	0
01	HFRE	H. Frequency	0 ~ 7F	57
02	VFRE	V. Frequency	0 ~ 1F	15
03	VPOS	V. Shift	0 ~ 1F	20
04	VSIZ	V. Size	0 ~ 3F	38
05	VLIN	V. Linarity	0 ~ 0F	7
06	VSCO	V. Correction	0 ~ 0F	4
07	HPOS	H. PHASE	0 ~ 0F	9
08	HSIZ	H. Size	0 ~ 1F	15
09	PAMP	Pin Amp	0 ~ 1F	15
10	CPIN	Corner Pin	0 ~ 7	4
11	PPHA	Pin Phase	0 ~ 0F	7
12	VCOM	V. Compensation	0 ~ 7	2
13	GAMP	Green Amp	0 ~ 1F	15
14	BAMP	Blue Amp	0 ~ 1F	15
15	GCUT	Green Cut Off	0 ~ 0F	7
16	BCUT	Blue Cut Off	0 ~ 0F	7
17	CROM	Chroma Trap	0 ~ 3F	32
18	SPIX	Picture	0 ~ 3F	20
19	SHUE	Sub Hue	0 ~ 3F	25
20	SCOL	Sub Color	0 ~ 3F	28
21	SBRT	Sub Bright	0 ~ 3F	29
22	RGBP	RGB Picture	0 ~ 3F	31
23	SHAP	Sharpness	0 ~ 0F	7
24	VSMO	V Pull in Range 0 : normal, 1 : wide	0, 1	0
25	REF	Reference line	0 ~ 3	1
26	ROFF	Red Out 0 : OFF, 1 : ON	0, 1	1
27	GOFF	Green Out 0 : OFF, 1 : ON	0, 1	1
28	BOFF	Blue Out 0 : OFF, 1 : ON	0, 1	1
29	ABLM	ABL Mode 0 : pic+brt, 1 : pic	0, 1	0
30	NOTC	Notch filter 0 : chrtrap, 1 : OFF	0, 1	0
31	DRGB	OSD intensity 0 : 0db, 1 : -3db	0, 1	0

* * * *

*

Note


* Mark : Don't adjust the Service Manu.





OP


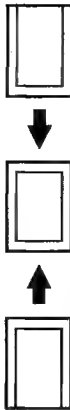


No.	Disp.	Item	Data range	Ave. data
1	DISP	PWN output	0 ~ 3F	4
2	SPOT	Spot killer	0 ~ 0F	8
3	PBLK	Pic blanking	0 ~ 1F	13

5. +B ADJUSTMENTS

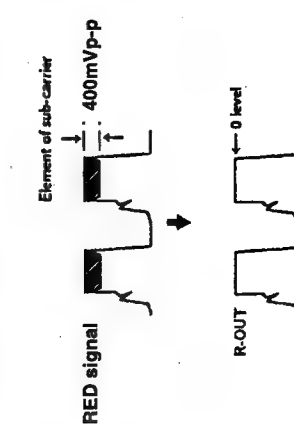ADJUSTMENT ITEM AND PROCEDURE	
A BOARD	
+B ADJUSTMENT (40V ADJ)	
1. Set the power source at $130^{+2.0}_{-0}$ VAC. 2. Input a color-bar signal. 3. Connect a digital voltmeter to the pin ⑨ of CN606. 4. Adjust RV601 for 40 ± 0.1 VDC on the digital voltmeter.	
F BOARD (KV9PT60 only)	
+B ADJUSTMENT (40V ADJ)	
1. Set the power source at 12 ± 0.5 VDC. 2. Input a color-bar signal. 3. Connect a digital voltmeter to the pin ⑨ of CN606. 4. Adjust RV652 for 40 ± 0.1 VDC on the digital voltmeter.	
+B ADJUSTMENT (9.8V ADJ)	
1. Set the power source at 12 ± 0.5 VDC. 2. Input a color-bar signal. 3. Connect a digital voltmeter to the pin ⑤ of CN 606. 4. Adjust RV 651 for 9.8 ± 0.1 VDC on the digital voltmeter.	

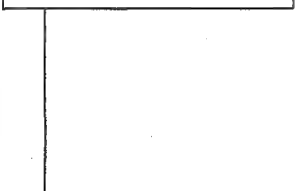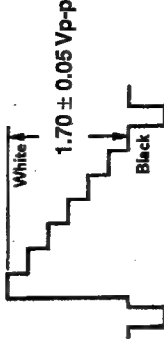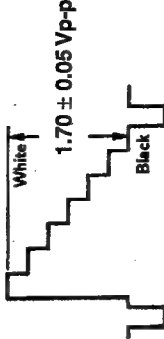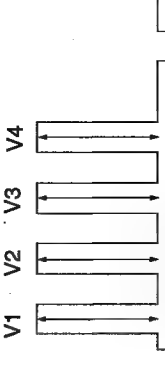ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
H. FREQUENCY ADJUSTMENT (HFRE) <ol style="list-style-type: none"> 1. Input a monoscope signal. 2. Set to Service adjustment Mode. 3. Connect a frequency counter to JL24. 4. Call the item of AFC, set to 3 level (free run). 5. Select HFRE with [1] and [4]. 6. Adjust with [3] and [6] so that the frequency counter is 15734±60Hz. 7. Call to item of AFC again, adjust the level "0". 8. Write into the memory by pressing [MUTING] then [ENTER]. 	Monoscope Pattern Frequency counter	JL24 (Base of Q550)	AFC HFRE	15734±60Hz
V. FREQUENCY ADJUSTMENT (VFRE) <ol style="list-style-type: none"> 1. Select video 1 with no connecting the signal. 2. Set to Service adjustment Mode. 3. Connect a frequency counter across CN501 (4) pin connector and ground. 4. Select VFRE with [1] and [4]. 5. Adjust with [3] and [6] so that the frequency counter is 56±0.5 Hz. 6. Write into the memory by pressing [MUTING] then [ENTER]. 	Frequency counter	CN501 (4) pin (VDY +)	VFRE	56±0.5 Hz
CROMA TRAP ADJUSTMENT (CTRP) <ol style="list-style-type: none"> 1. Input the red pattern signal, and adjust PICTURE, BRIGHTNESS and COLOR. 2. Set to Service adjustment Mode. 3. Connect an oscilloscope between the A board connector CN301 (1) pin and ground. 4. Select CTRP with [1] and [4]. 5. Adjust with [3] and [6] for the "0" level. 6. Write into the memory by pressing [MUTING] then [ENTER]. 	Red pattern Oscilloscope	CN301 (1) pin R-OUT (A board)	PICTURE maximum BRIGHTNESS center COLOR minimum CTRP	


ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>SUB PICTURE ADJUSTMENT (SPIX)</p> <ol style="list-style-type: none"> 1. Input the color bar signal, and adjust PICTURE, BRIGHTNESS and COLOR. 2. Set to Service adjustment Mode. 3. Connect an oscilloscope between the A board connector CN301 ① pin and ground. 4. Call to item of G OFF and B OFF, set to 0 evel. 5. Select SPIX with ① and ④. 6. Adjust with ③ and ⑥, so that the wave form level is $1.70 \pm 0.05 \text{Vp-p}$. 7. Call to item of G OFF and B OFF, set to 1 evel. 8. Write the memory by pressing MUTING then ENTER. 	<p>Color-Bar Pattern</p> <p>Oscilloscope</p>	 <p>CN301 ① pin R-OUT (A board)</p>	<p>PICTURE maximum COLOR minimum BRIGHTNESS center</p> <p>R OFF : ON (1) G OFF : OFF (0) B OFF : OFF (0)</p>	 
<p>SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)</p> <ol style="list-style-type: none"> 1. Input a color bar signal, and adjust PICTURE, BRIGHTNESS and COLOR. 2. Connect an oscilloscope between the A board connector CN301 ③ pin and ground. 3. Set to service adjustment mode. 4. Select SCOL with ① and ④. 5. Adjust with ③ and ⑥ for the $V1=V4 \pm 0.1 \text{V}$. 6. Select SHUE with ① and ④. 7. Adjust with ③ and ⑥ for the $V2=V3 \pm 0.1 \text{V}$. 8. Write into the memory by pressing MUTING then ENTER. 	<p>Color-Bar Pattern</p> <p>Oscilloscope</p>	<p>CN301 ③ pin B-OUT (A board)</p>	<p>PICTURE maximum COLOR center BRIGHTNESS center</p> <p>SCOL SHUE</p>	 <p>V1 V2 V3 V4 SCOL=V1-V4 SHUE=V2-V3</p>

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
V. CENTER ADJUSTMENT (VPOS) 1. Input a cross hatch signal. 2. Set to Service adjustment Mode. 3. Select VPOS with [1] and [4]. 4. Adjust with [3] and [6] for the best vertical center. 5. Write into the memory by pressing [MUTING] then [ENTER].	Cross-hatch pattern		VPOS	V. SHIFT(VPOS) 
H. CENTER ADJUSTMENT (HPOS) NOTE : Perform this adjustment after H. FREQUENCY ADJUSTMENT (HFRE). 1. Input a cross hatch signal. 2. Set to Service adjustment Mode. 3. Select HPOS with [1] and [4]. 4. Adjust with [3] and [6] for the best horizontal center. 5. Write into the memory by pressing [MUTING] then [ENTER].	Cross-hatch pattern		HPOS	H. CENTER(HPOS) 
V. LINEARITY(V LIN), V CORRECTION (VSCO) ADJUSTMENT 1. Input a cross hatch signal. 2. Set to Service adjustment Mode. 3. Select VLIN and VSCO with [1] and [4]. 4. Adjust with [3] and [6] for the best picture. 5. Write into the memory by pressing [MUTING] then [ENTER].	Cross-hatch pattern		VLIN VSCO	V. LINEARITY(VLIN)  V. CORRECTION(VSCO) 


SECTION 5


SAFETY RELATED ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>[A BOARD]</p> <p>RV601,R069 B+ MAXIMUM VOLTAGE CONFIRMATION AND ADJUSTMENT.</p> <p>The following adjustments should always be performed when replacing the following components (marked with <input checked="" type="checkbox"/> on the schematic diagram).</p> <ol style="list-style-type: none"> 1. Set the power source at 130^{+20}_{-00} VAC. 2. Receive Monoscope signal. 3. Set the PICTURE and BRIGHTNESS at the initial reset. 4. Adjust RV601 (40VADJ) to maximum. 5. Confirm is the voltage of the checked terminal of pin ⑨ (JL7) of CN606 connector is less than 43.0VDC. 6. After confirmation, Readjust RV 601 to obtain 40 ± 0.1VDC. <p>[F BOARD] (KV-9PT60)</p> <p>RV652,R670 B+ MAXIMUM VOLTAGE CONFIRMATION AND ADJUSTMENT.</p> <p>The following adjustments should always be performed when replacing the following components (marked with <input checked="" type="checkbox"/> on the schematic diagram).</p> <ol style="list-style-type: none"> 1. Set the power source at $15.0^{+1.0}_{-00}$ VDC. 2. Receive Monoscope signal. 3. Set the PICTURE and BRIGHTNESS at the initial reset. 4. Adjust RV652 (40VADJ) to maximum. 5. Confirm is the voltage of the checked terminal of pin ⑨ (JL7) of CN606 connector is less than 43.0VDC. 6. After confirmation, Readjust RV 652 to obtain 40 ± 0.1VDC. 	<p>Monoscope signal</p>	<p><input checked="" type="checkbox"/> marked parts IC601, R627, R629, R069, L601</p> <p>CN 606 pin ⑨</p>	<p><input checked="" type="checkbox"/> RV601,R069</p> <p>PICTURE maximum BRIGHTNESS center</p>	<p>Connector CN 606 pin ⑨ less than 43.0 VDC.</p>
	<p>Monoscope signal</p>	<p><input checked="" type="checkbox"/> marked parts F653, IC652, L654, R667, R668, R670</p> <p>CN 606 pin ⑨</p>	<p><input checked="" type="checkbox"/> RV652,R670</p> <p>PICTURE maximum BRIGHTNESS center</p>	<p>Connector CN 606 pin ⑨ less than 43.0 VDC.</p>

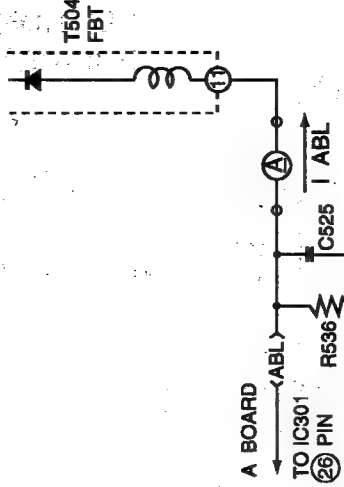
ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>• Preparation fore confirmation.</p> <ol style="list-style-type: none"> 1. Set the power source to 120 ± 1.0 VAC. 2. Receive Monoscope signal. 3. Set the PICTURE and BRIGHTNESS at the reset position. 4. Confirm if the voltage between JL46 (H.PROT) and ground is more than DC 85V. 5. When inputting 12 ± 1.0 VDC at the DC power supply input terminal do the same adjust process 3. and 4. above. (KV-9PT60 ONLY) 	Monoscope signal		<p>PICTURE maximum BRIGHTNESS center</p>	
<p>HOLD DOWN OPERATION CONFIRMATION .</p> <ol style="list-style-type: none"> 1. Set the power source to 120 ± 1.0 VAC. 2. Receive all white signal. 3. Using an external DC power supply, apply voltage to JL46 (H.PROT) and ground. 4. Gradually increase the voltage and confirm if the hold-down circuit works (Raster disappears) at less than 113.0VDC. 5. Confirm if ABL current is within $660 \pm 50\mu\text{A}$. 	All white signal	<p>▣ marked parts C511, C513, C528, C531, D505, D506, D507, D510, L505, IC502, IC602, Q554, Q555, R511, R519, R520, R523, R525, R527, R557, R558, R559, R560, R639, R640, T504, DY.</p>	<p>▣ RV601,R069</p>	 <p>Connector a Ammeter to the location of R504 space. After the current measurement, put back the 2 resistors.</p> <p>ABL current KV-9PT50/9PT60 : $660 \pm 50\mu\text{A}$ KV-9PT60 : $70 \pm 50\mu\text{A}$</p>
<p>(KV-9PT60)</p> <p>HOLD DOWN OPERATION CONFIRMATION .</p> <ol style="list-style-type: none"> 1. Set the power source to 12 ± 1.0 VDC. 2. Receive a dot signal. 3. Using an external DC power supply, apply voltage to JL46 (H.PROT) and ground. 4. Gradually increase the voltage and confirm if the hold-down circuit works (Raster disappears) at less than 113.0VDC. 5. Confirm if ABL current is within $70 \pm 50\mu\text{A}$. 	Dot signal			


6-1.BLOCK DIAGRAMS (1)

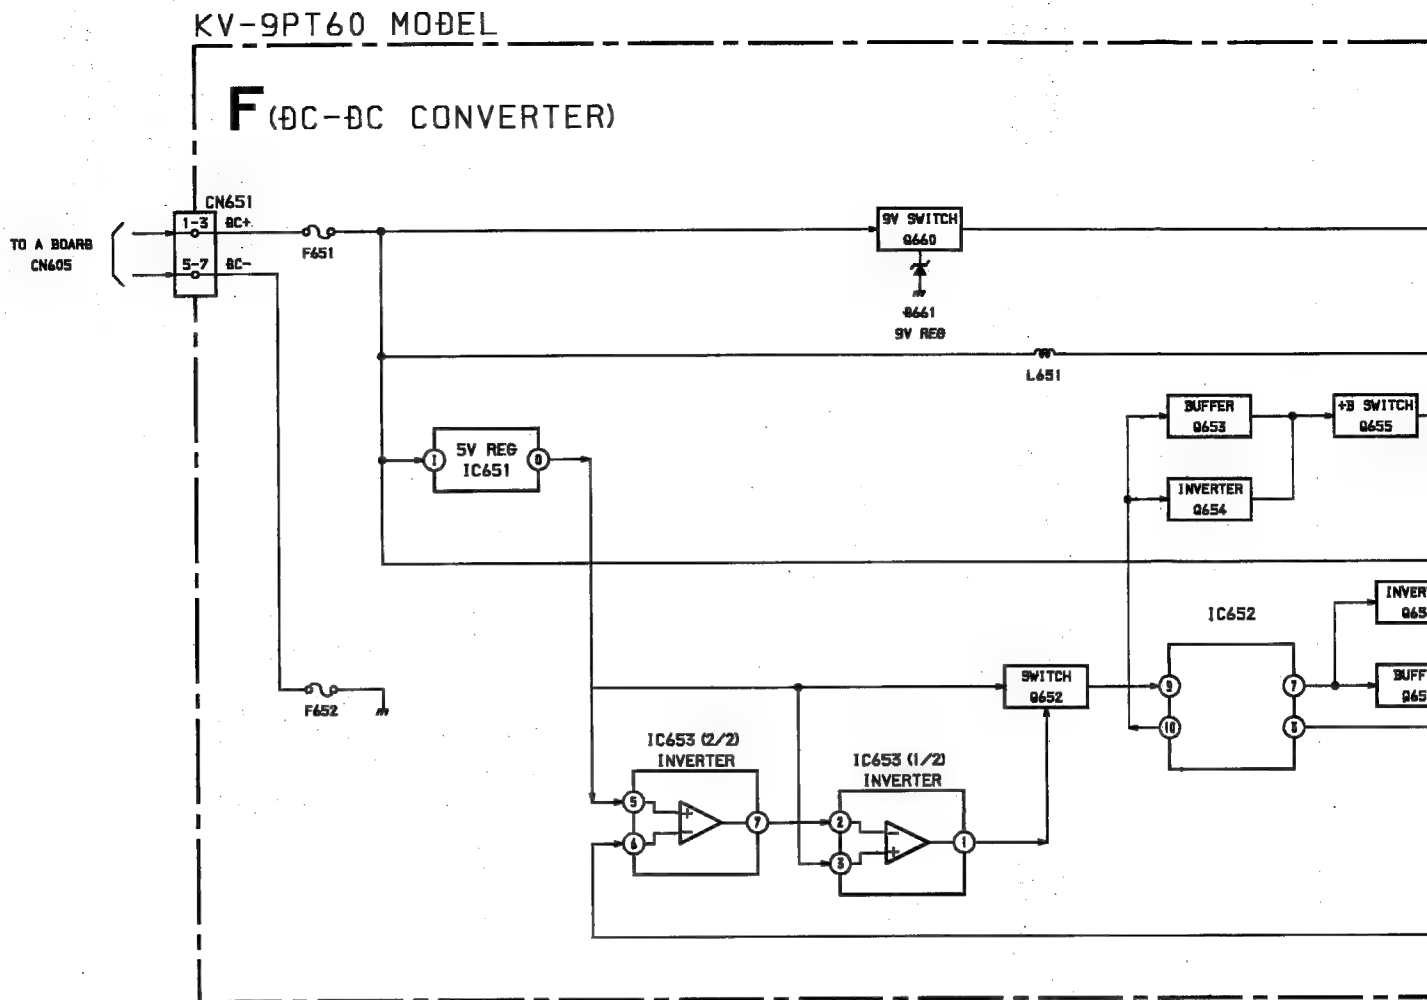


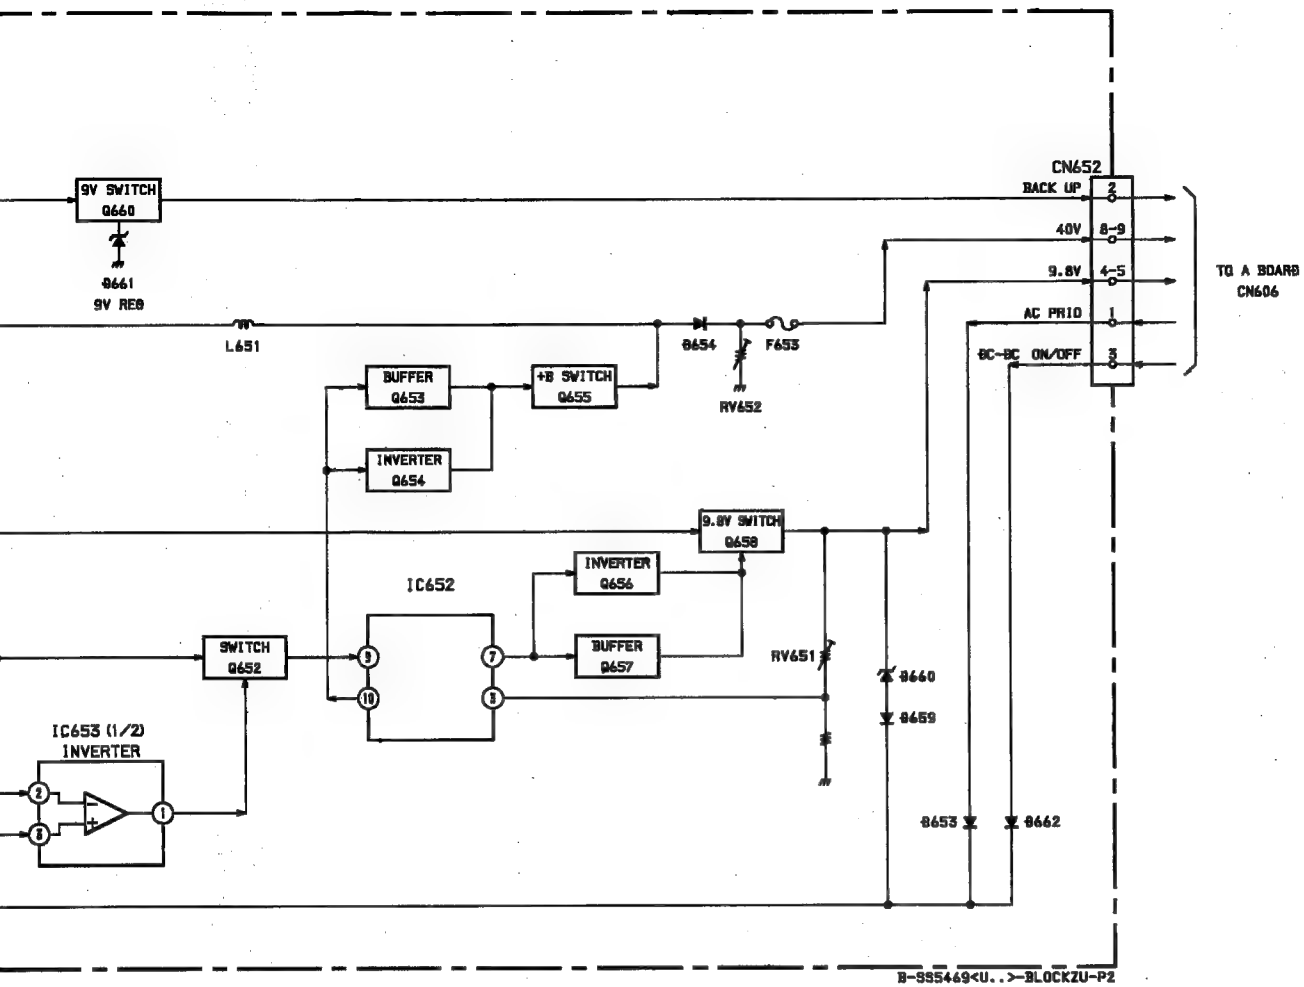


BLOCK DIAGRAMS (2)

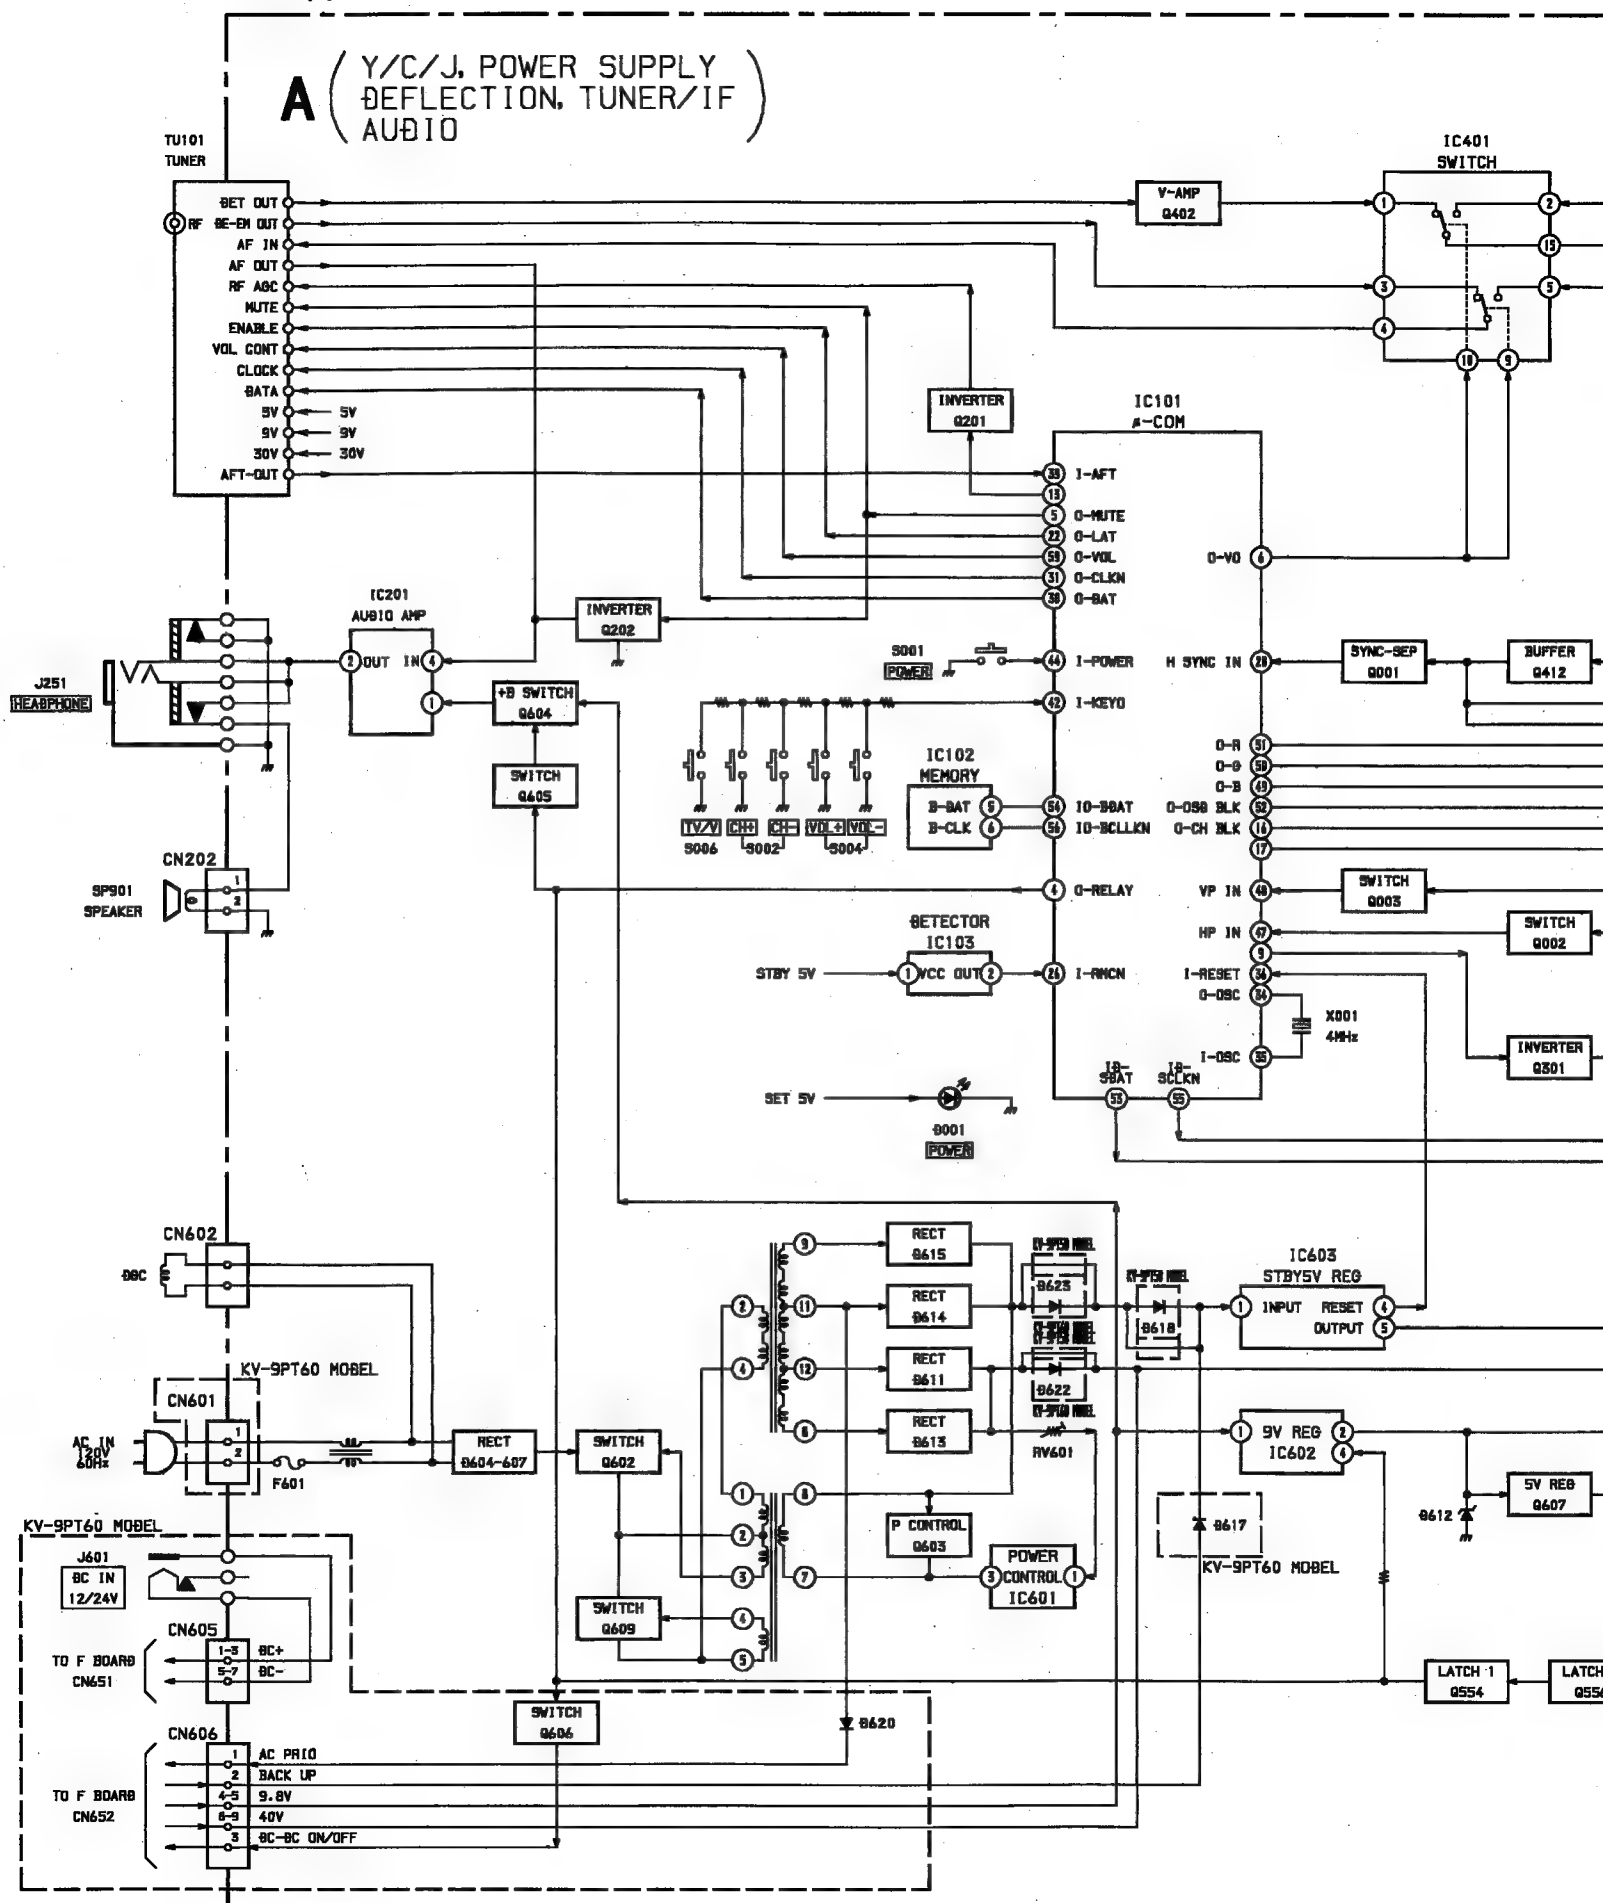

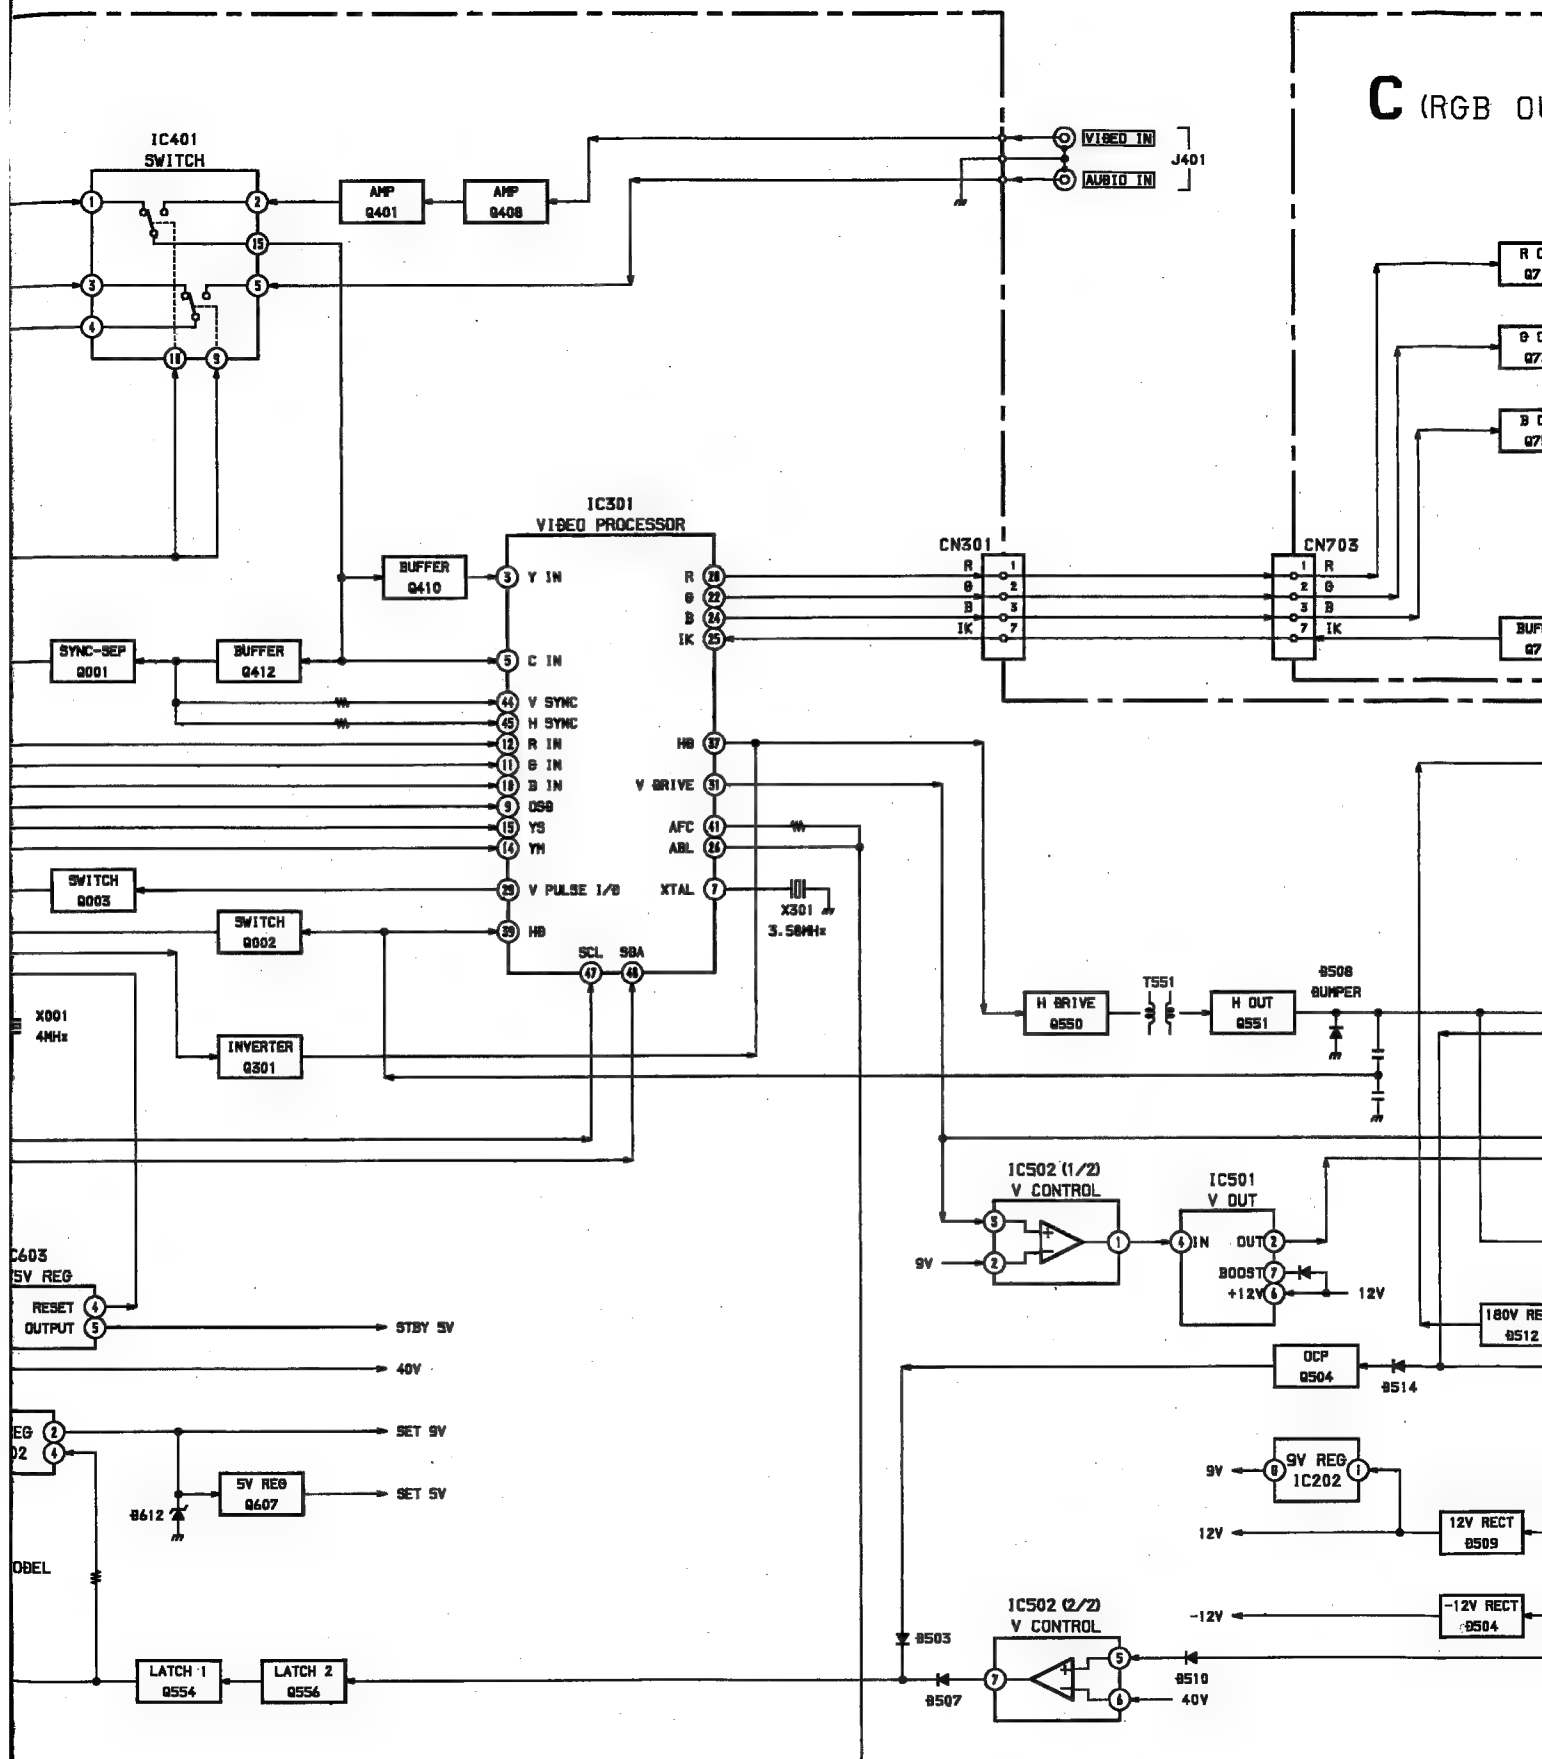

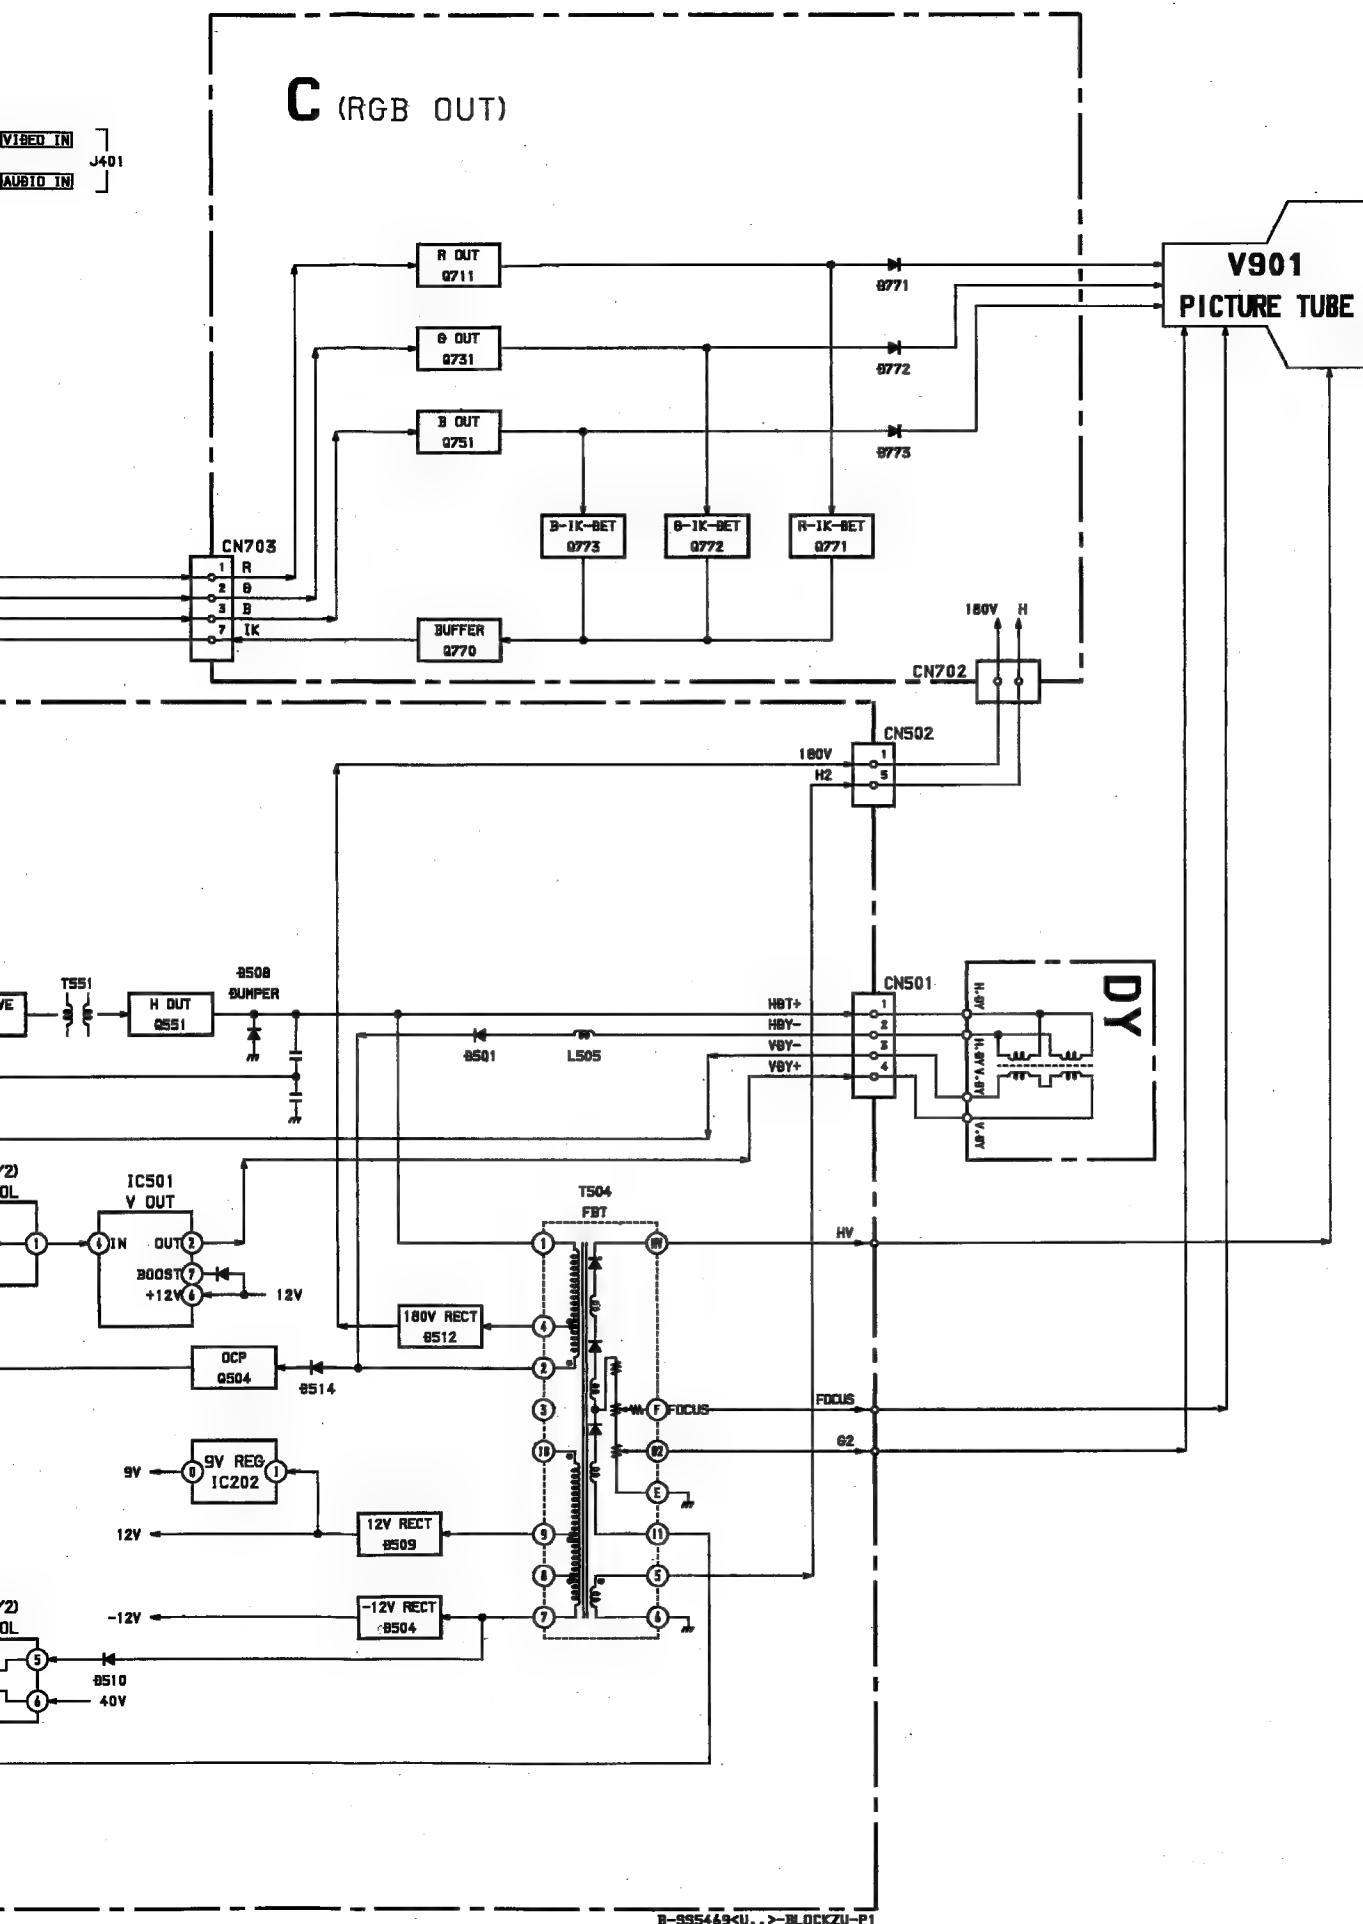

6-2. CIRCUIT BOARDS LOCATION

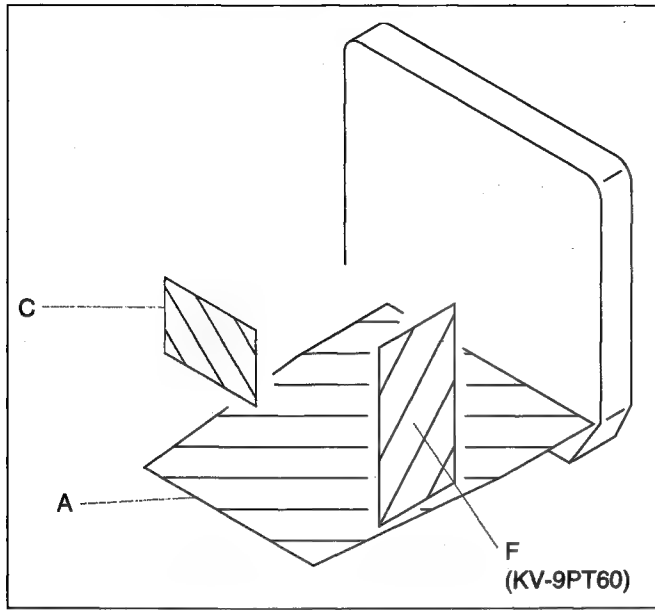

6-3. PRINTED WRING BOARDS AND SCHEMATIC DIAGRAMS

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All electrolytics are in 50V unless otherwise specified.
- All resistors are in ohms.
 $\text{k}\Omega=1000\Omega$, $\text{M}\Omega=1000\text{k}\Omega$
- Indication of resistance, which dose not have one for rating electrical power, is as follows.

Pitch : 5mm
 Rating electrical power : $\frac{1}{4}\text{W}$

- $\frac{1}{4}\text{W}$ in resistance, $\frac{1}{10}\text{W}$ and $\frac{1}{8}\text{W}$ in chip resistance.
- : nonflammable resistor.
- : fusible resistor.
- Δ : internal component.
- : panel designation and adjustment for repair.
- # : not mounted.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- \perp : earth-ground.
- : earth-chassis.
- The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
 Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved.
 (Refer to R069, R670, RV601, RV652 adjustment on Page 29-30.)
- When replacing the part in below table, be sure to perform the related adjustment.
- Readings are taken with a color-bar signal input.
- Readings are taken with a 10M Ω digital multimeter.
- Voltages are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- S : Measurement impossibility.

Part replaced ()	Adjustment ()
C511, C513, C528, C531, D505, D506, D507, D510, IC502, IC602, L505, Q554, Q555, R511, R519, R520, R523, R525, R527, R557, R558, R559, R560, R639, R640, T504, DY A BOARD	HOLD-DOWN
IC601, L601, R069, R627, RV601 A BOARD	RV601, R069 (B+ MAX)
F653, IC652, L654, R667, R670, RV652 F BOARD	RV652, R670 (B+ MAX)

- : B+line.
- : B-line.
- (Actual measured value may be different).
- : signal path. (RF)
- Circled numbers are waveform references.

Reference information

RESISTOR	: RN METAL FILM
	: RC SOLID
	: FPRD NONFLAMMABLE CARBON
	: FUSE NONFLAMMABLE FUSIBLE
	: RW NONFLAMMABLE WIREWOUND
	: RS NONFLAMMABLE METAL OXIDE
	: RB NONFLAMMABLE CEMENT
	: ADJUSTMENT RESISTOR
COIL	: LF-8L MICRO INDUCTOR
CAPACITOR	: TA TANTALUM
	: PS STYROL
	: PP POLYPROPYLENE
	: PT MYLAR
	: MPS METALIZED POLYESTER
	: MPP METALIZED POLYPROPYLENE
	: ALB BIPOLAR
	: ALT HIGH TEMPERATURE
	: ALR HIGH RIPPLE

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.


Note: The symbol display is on the component side.

The components identified by shading and mark are critical for safety. Replace only with part number specified.

The symbol indicate fast operating fuse. Replace only with fuse of same rating as maked.

Note: Les composants identifiés per un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible a action rapide. Doit etre remplacee par une fusible de meme yaleur, comme maque.

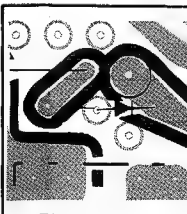


**Y/C/J, POWER SUPPLY,
DEFLECTION, TUNER/IF, AUDIO**

A BOARD LOCATION

IC		D402	D-10
IC101	C-3	D403	C-4
IC102	B-3	D410	D-10
IC103	C-1	D501	D-6
IC201	A-2	D502	D-8
IC202	C-9	D503	D-7
IC301	B-6	D504	E-9
IC401	C-10	D505	D-8
IC501	C-8	D506	D-8
IC502	D-8	D507	D-7
IC601	E-5	D508	G-7
IC602	D-5	D509	E-10
IC603	B-2	D510	E-9
TRANSISTOR		D512	F-8
Q001	C-4	D514	E-8
Q002	A-3	D601	D-4
Q003	A-4	D602	D-4
Q201	C-8	D603	D-3
Q202	A-2	D604	F-3
Q301	C-6	D605	F-2
Q401	C-9	D606	F-2
Q402	C-9	D607	F-3
Q408	D-9	D608	E-3
Q410	A-9	D609	E-3
Q412	B-10	D610	D-3
Q504	E-7	D611	H-5
Q550	E-7	D612	D-4
Q551	F-7	D613	G-6
Q554	D-7	D614	H-5
Q555	D-6	D615	H-5
Q602	E-3	D616	E-3
Q603	F-5	D617	B-2
Q604	E-5	D618	B-2
Q605	E-6	D619	G-5
Q606	D-5	D620	H-5
Q607	D-4	D621	E-3
Q609	E-2	D622	H-4
DIODE		D623	G-6
D001	B-1	VARIABLE RESISTOR	
D003	B-4		
D201	D-9	RV601	F-5
D302	B-6		

The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.




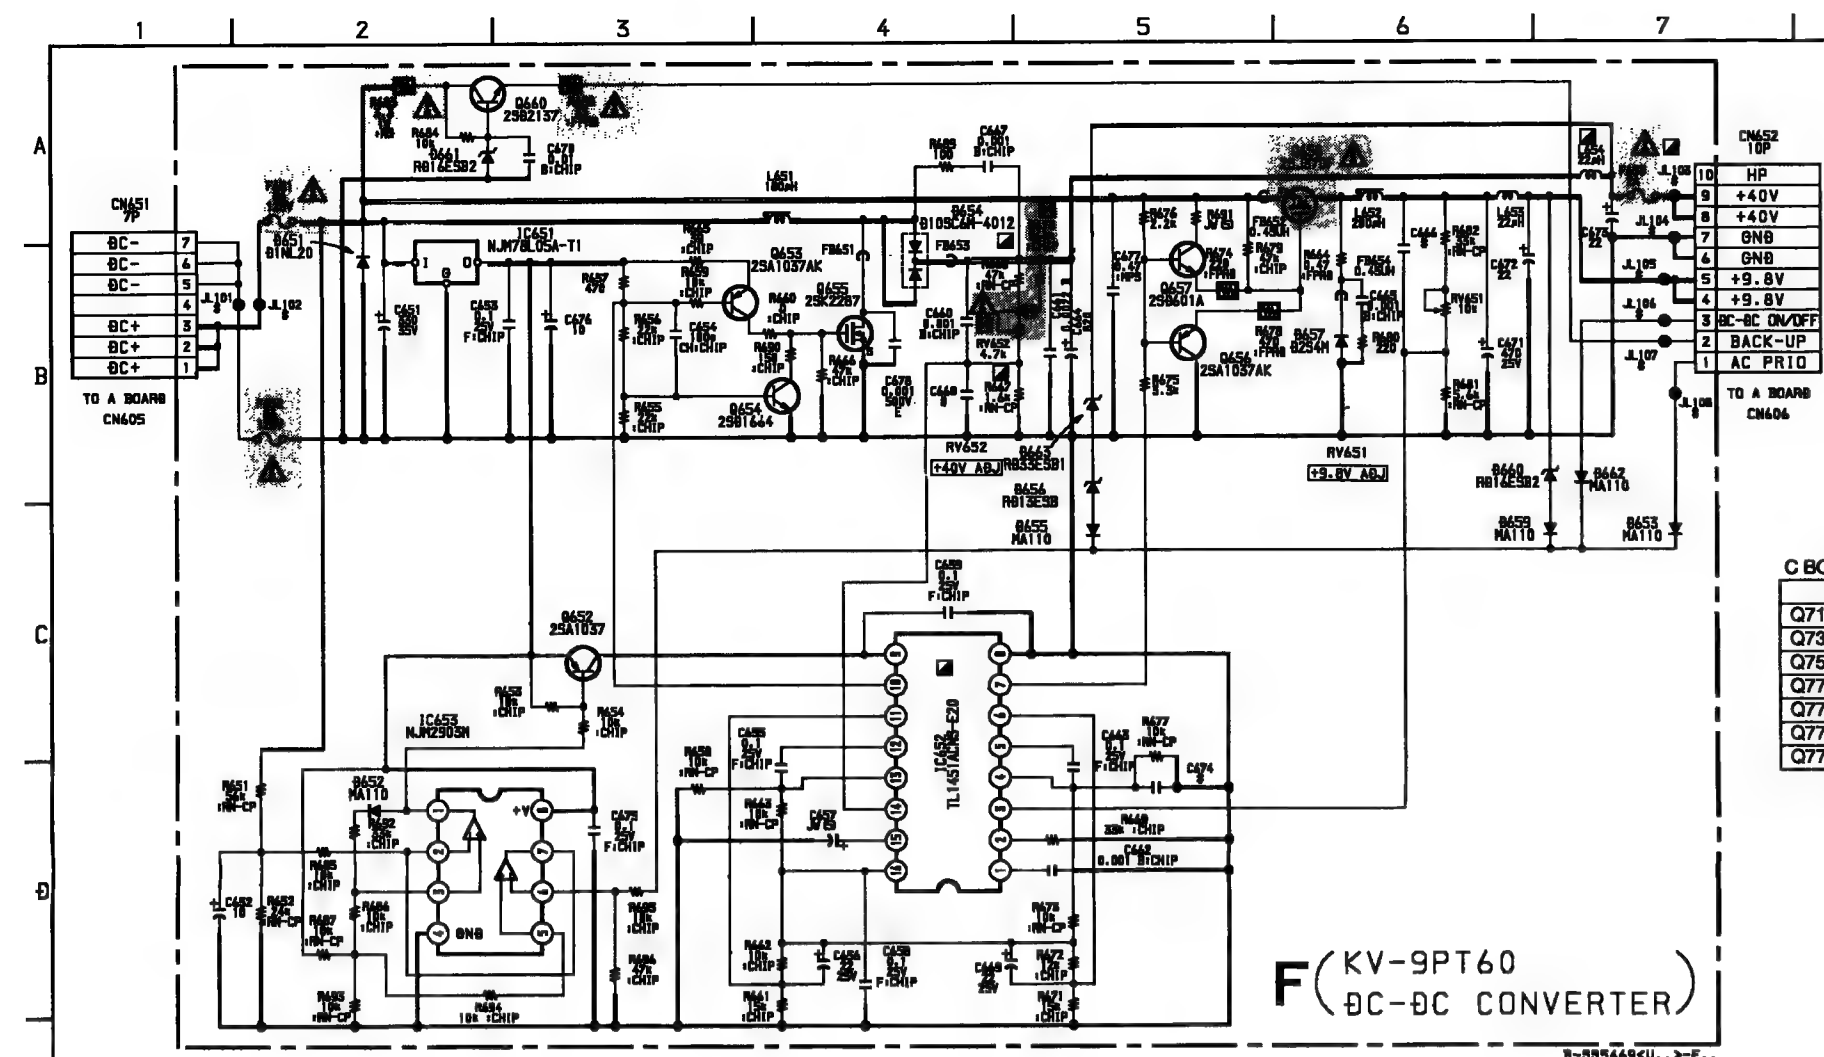


Q711	B	C	E
Q711	2.0	137.0	1.6
Q731	2.1	124.8	1.6
Q761	2.0	127.0	1.6
Q770	2.1	0.2	2.6
Q771	137.0	2.1	133.5
Q772	124.8	2.1	121.6
Q773	127.0	2.1	124.1

All voltages are in V.

F [DC-DC CONVERTER] **C** [R. G. B. OUT]


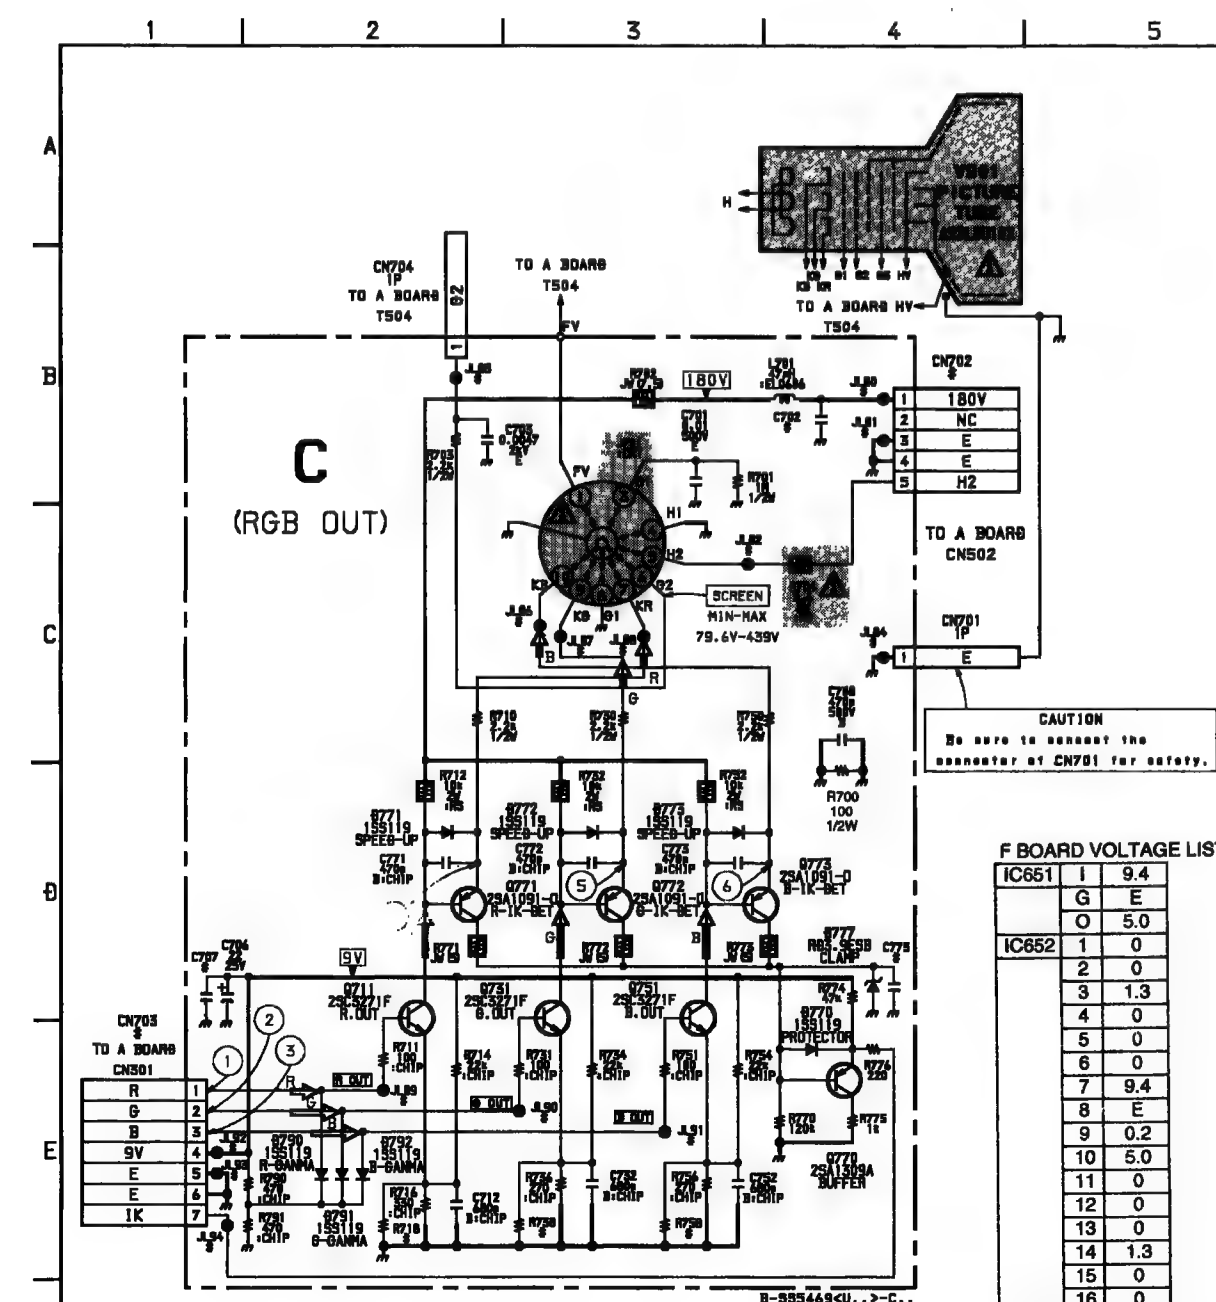


C BOARD WAVEFORMS

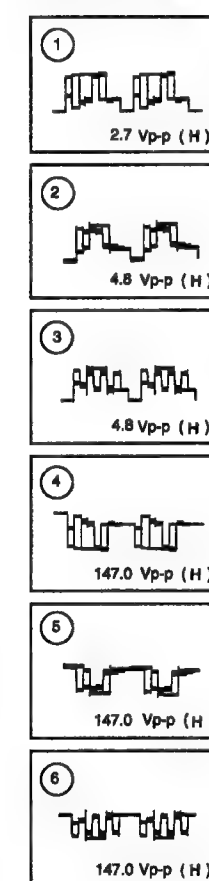


Q652	B	C	E
Q652	4.8	0.2	5.0
Q653	5.0	0	5.0
Q654	0.6	0	E
Q655	9.4	E	9.4
Q656	9.4	9.4	9.4
Q657	9.4	9.4	9.4
Q658	9.4	9.4	9.1
Q659	0	S	G
Q660	0	E	9.4
Q661	9.3	9.3	10.0

All voltages are in V.

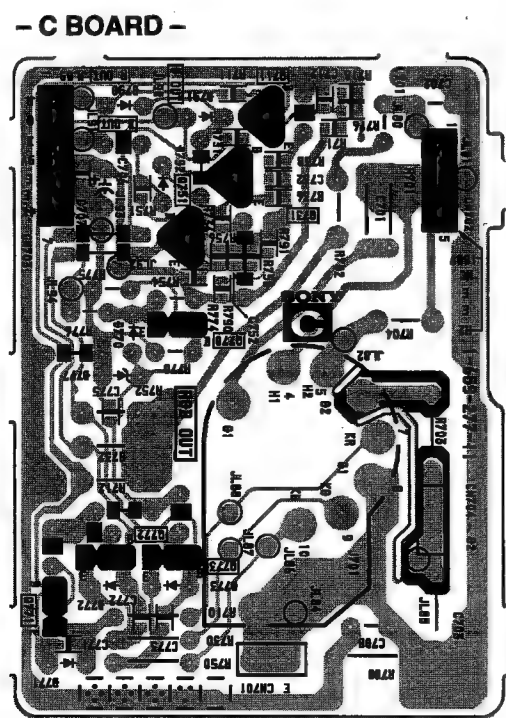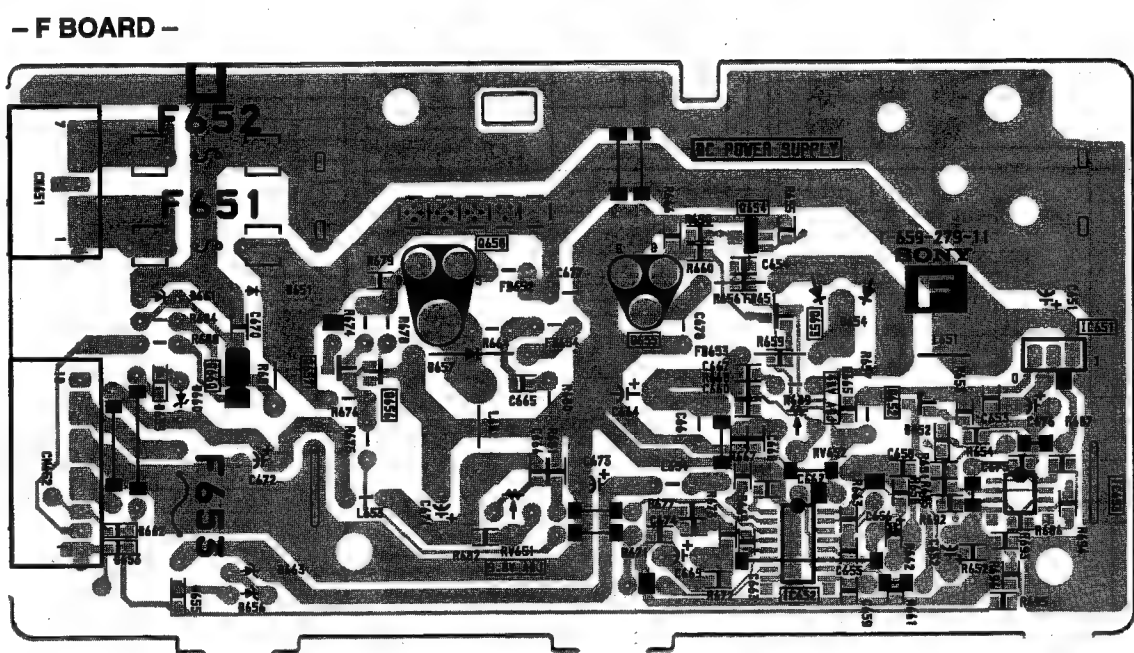

6-4. SEMICONDUCTORS

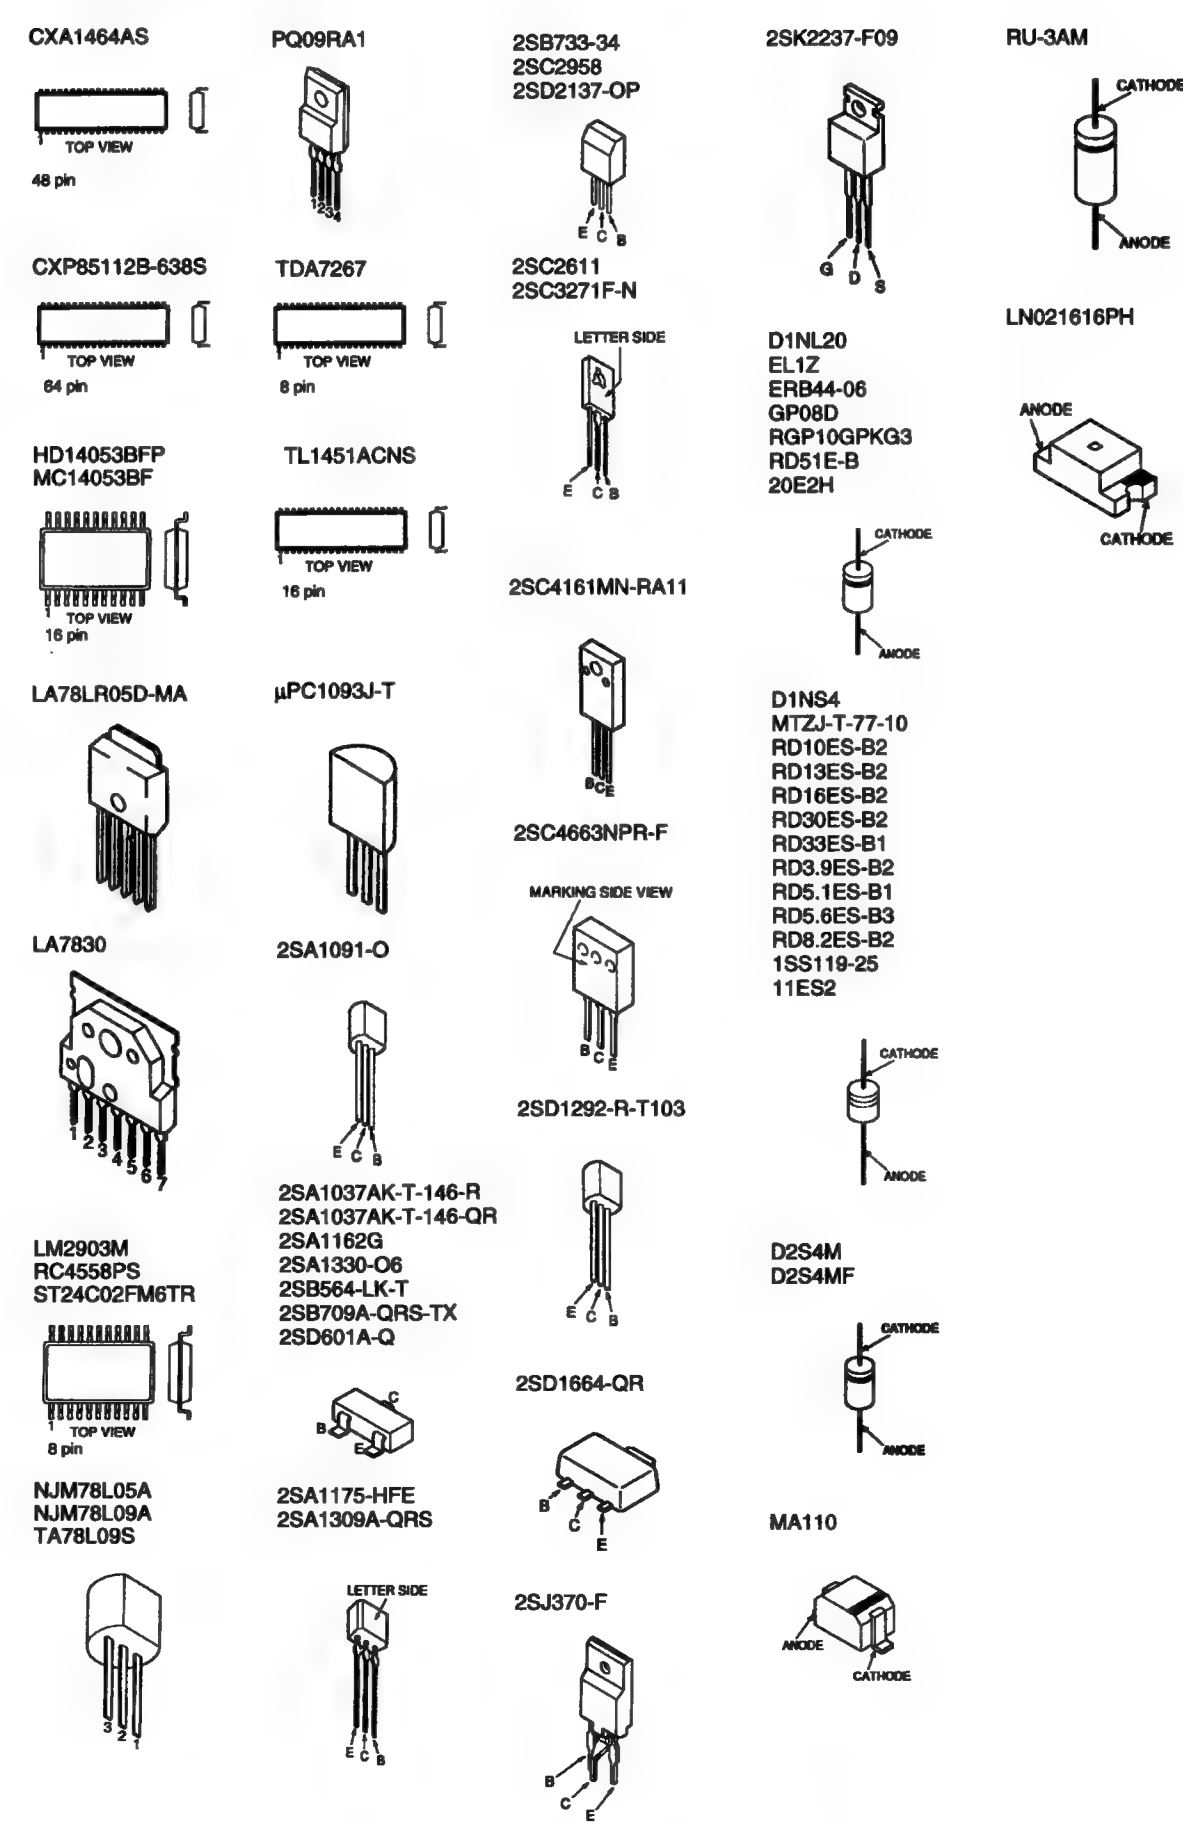

SECTION 7 EXPLODED VIEWS


NOTE:

- Items with an asterisk (*) on part number and on description are not stocked because they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Items marked with an asterisk (*) are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

7-1. CHASSIS

* 7-685-646-79
* 7-685-663-79

* BVTTP 3x12
* BVTTP 4x16

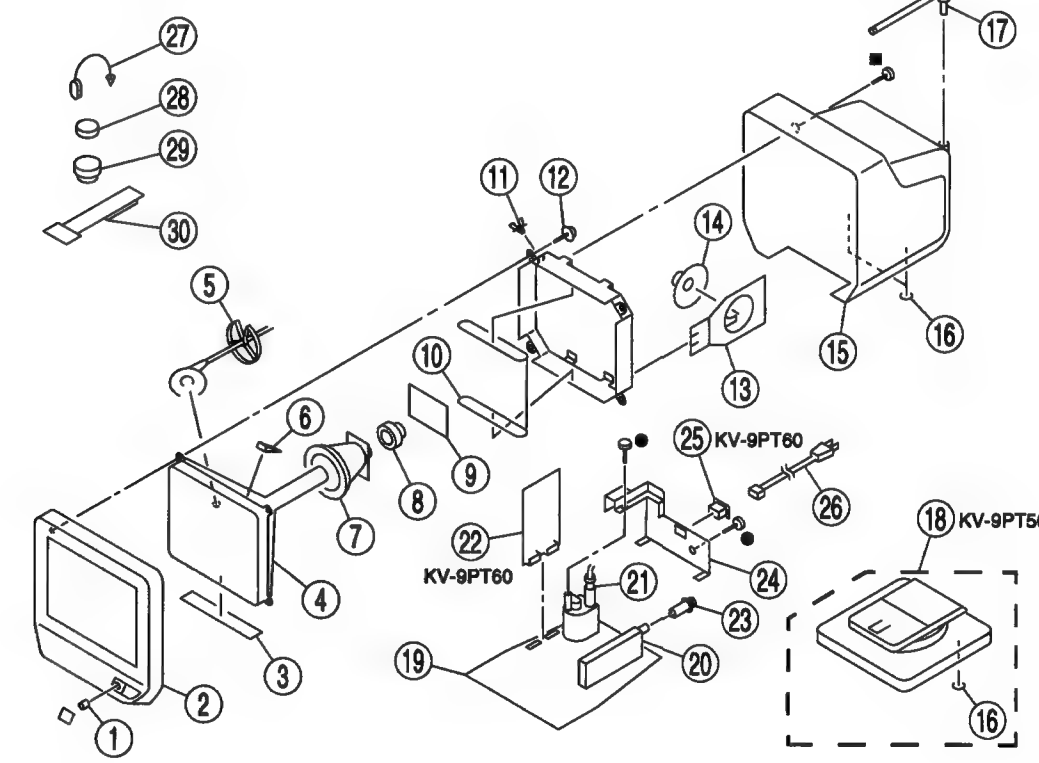

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	4-374-967-01	GUIDE, LIGHT		18	X-4033-201-1	BRACKET ASSY (KV-9PT50)	16
2	X-4033-318-1	BEZEL NET ASSY (KV-9PT50)		19	A-1297-679-A	A BOARD COMPLETE (KV-9PT50)	
3	4-052-215-01	SHEET, BLOTING		20	A-1297-680-A	A BOARD COMPLETE (KV-9PT50)	
4	8-735-822-05	CRT 1 OSL (SD-270) (A23LDU10X)		21	8-598-338-00	TUNER BTF-LA02	
5	4-034-856-01	HOLDER, HIGH-VOLTAGE CABLE		22	1-453-206-11	TRANSFORMER ASSY, FLYBACK NX-1745 / X4F4	
6	3-704-495-02	SPACER, DY		23	A-1245-582-A	F BOARD COMPLETE (KV-9PT50)	
7	8-451-450-11	DY11 OSLA		24	1-776-374-11	PLUG, F-PIN	
8	1-452-760-11	NECK ASSEMBLY (NA221)		25	4-052-006-31	BRACKET, TERMINAL BOARD (KV-9PT50(US))	
9	A-1331-511-A	C BOARD COMPLETE		26	4-052-006-01	BRACKET, TERMINAL BOARD (KV-9PT50(CND) / 9PT50(US))	
10	1-411-754-11	COIL, DEMAGNETIC		27	4-308-870-00	CLIP, LEAD WIRE	
11	4-395-824-02	HOLDER, DEGAUSSING COIL		28	1-452-032-00	MAGNET, DISK, 10MMØ	
12	4-356-808-01	SCREW(S), TAPPING		29	1-452-094-00	MAGNET, ROTATABLE DISK, 15MMØ	
13	4-052-076-01	HOLDER, SPEAKER					
14	1-505-226-11	SPEAKER (BCM)					
15	4-052-045-31	COVER, REAR (KV-9PT50)					
16	4-052-045-21	COVER, REAR (KV-9PT50)					
17	4-052-214-01	FOOT					
	1-501-813-11	ANTENNA, TELESCOPIC (KV-9PT50)					
	1-501-813-21	ANTENNA, TELESCOPIC (KV-9PT50)					

The components identified by shading and Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 8

ELECTRICAL PARTS LIST

F

NOTE:

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

• The components identified by Δ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F : nonflammable

When indicating parts by reference number, please include the board name.

• CAPACITORS

PF : $\mu\mu$ F

• There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1245-582-A F BOARD, COMPLETE (KV-9PT60)				<FUSE>			
*****				F651	Δ 1-533-311-11	FUSE, GLASS CYLINDRICAL (DIA 5/8A/125V)	
4-382-854-11 SCREW (M3X10), P, SW (+)					1-533-223-11	HOLDER, FUSE; F651	
<CAPACITOR>				F652	Δ 1-533-311-11	FUSE, GLASS CYLINDRICAL (DIA 5/8A/125V)	
C651	1-111-087-11	ELECT 330MF	20% 35V		1-533-223-11	HOLDER, FUSE; F652	
C652	1-126-964-11	ELECT 10MF	20% 50V	F653	Δ 1-532-779-21	FUSE, MICRO (SECONDARY) 2A/125V	
C653	1-163-038-91	CERAMIC CHIP 0.1MF	25V	<FERRITE BEAD>			
C654	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	FB651	1-414-411-21	INDUCTOR, BEAD	
C655	1-163-038-91	CERAMIC CHIP 0.1MF	25V	FB652	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
C656	1-128-551-11	ELECT 22MF	20% 25V	FB653	1-414-411-21	INDUCTOR, BEAD	
C658	1-163-038-91	CERAMIC CHIP 0.1MF	25V	FB654	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
C659	1-163-038-91	CERAMIC CHIP 0.1MF	25V	<IC>			
C660	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	IC651	8-759-708-05	IC NJM78L05A	
C661	1-102-121-00	CERAMIC 0.0022MF	10% 50V	IC652	8-759-937-36	IC TL1451ACNS	
C662	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	IC653	8-759-981-65	IC LM2903M	
C663	1-163-038-91	CERAMIC CHIP 0.1MF	25V	<COIL>			
C664	1-111-125-51	ELECT 820MF	20% 50V	L651	1-411-763-11	COIL, CHOKE 200UH	
C665	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	L652	1-412-049-11	COIL, CHOKE 200UH	
C667	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	L653	1-412-529-11	INDUCTOR 22UH	
C669	1-128-551-11	ELECT 22MF	20% 25V	L654	1-412-529-11	INDUCTOR 22UH	
C670	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	<TRANSISTOR>			
C671	1-111-063-11	ELECT 470MF	20% 25V	Q652	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
C672	1-126-965-11	ELECT 22MF	20% 50V	Q653	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
C673	1-126-965-11	ELECT 22MF	20% 50V	Q654	8-729-920-85	TRANSISTOR 2SD1664-QR	
C675	1-163-038-91	CERAMIC CHIP 0.1MF	25V	Q655	8-729-034-86	TRANSISTOR 2SK2287-F09	
C676	1-107-929-11	ELECT 10MF	20% 50V	Q656	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
C677	1-136-173-00	FILM 0.47MF	5% 50V	Q657	8-729-422-27	TRANSISTOR 2SD601A-Q	
C678	1-102-038-00	CERAMIC 0.001MF	500V	Q658	Δ 8-729-035-38	TRANSISTOR 2SJ370-F	
<CONNECTOR>				Q660	8-729-423-XX	TRANSISTOR 2SD2137-OP	
CN651	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P		<RESISTOR>			
CN652	1-766-924-11	CONNECTOR, BOARD TO BOARD 10P		R651	1-208-824-11	METAL CHIP 56K	0.50% 1/10W
<DIODE>				R652	1-216-684-91	METAL CHIP 24K	0.50% 1/10W
D651	8-719-510-26	DIODE D1NL20		R653	1-216-073-00	METAL GLAZE 10K	5% 1/10W
D652	8-719-404-46	DIODE MA110		R654	1-216-073-00	METAL GLAZE 10K	5% 1/10W
D653	8-719-404-46	DIODE MA110		R655	1-216-081-00	METAL GLAZE 22K	5% 1/10W
D654	8-719-057-96	DIODE D10SC6M-4012		R656	1-216-081-00	METAL GLAZE 22K	5% 1/10W
D655	8-719-404-46	DIODE MA110		R657	1-249-413-11	CARBON 470	5% 1/4W
D656	8-719-110-36	DIODE RD13ESB2		R658	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
D657	8-719-022-97	DIODE D2S4MF		R659	1-216-073-00	METAL GLAZE 10K	5% 1/10W
D659	8-719-404-46	DIODE MA110		R660	1-216-295-91	CONDUCTOR, CHIP	
D660	8-719-110-46	DIODE RD16ESB3		R661	1-216-077-00	METAL GLAZE 15K	5% 1/10W
D661	8-719-110-46	DIODE RD16ESB3		R662	1-216-073-00	METAL GLAZE 10K	5% 1/10W
D662	8-719-404-46	DIODE MA110		R663	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
D663	8-719-110-76	DIODE RD33ESB1		R664	1-249-377-11	CARBON 0.47	5% 1/4W F
				R665	1-216-015-00	METAL GLAZE 39	5% 1/10W



• The components identified by **F** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque **F** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
R666	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R667	1-216-656-11	METAL CHIP 1.6K	0.50% 1/10W
R668	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R669	1-216-085-00	METAL GLAZE 33K	5% 1/10W
F R670	A 1-216-115-00	METAL GLAZE 560K	5% 1/10W
R671	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R672	1-216-075-00	METAL GLAZE 12K	5% 1/10W
R673	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
R674	1-249-409-11	CARBON 220	5% 1/4W
R675	1-249-423-11	CARBON 3.3K	5% 1/4W
R676	1-249-421-11	CARBON 2.2K	5% 1/4W
R677	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
R678	1-249-413-11	CARBON 470	5% 1/4W
R679	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R680	1-247-815-91	CARBON 220	5% 1/4W
R681	1-208-800-11	METAL CHIP 5.6K	0.50% 1/10W
R682	1-216-687-11	METAL CHIP 33K	0.50% 1/10W
R683	A 1-216-355-71	METAL OXIDE 3.3	5% 1W
R684	1-249-429-11	CARBON 10K	5% 1/4W
R685	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R686	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R687	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
R688	A 1-249-399-91	CARBON 33	5% 1/4W
R689	1-247-807-31	CARBON 100	5% 1/4W
R690	1-216-029-00	METAL GLAZE 150	5% 1/10W
R692	1-216-085-00	METAL GLAZE 33K	5% 1/10W
R693	1-208-806-11	METAL CHIP 10K	0.50% 1/10W
R694	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R695	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R696	1-216-089-91	METAL GLAZE 47K	5% 1/10W

<VARIABLE RESISTOR>

RV651	1-241-764-11	RES. ADJ. CERMET 10K
F RV652	A 1-241-773-21	RES. ADJ. CERMET 4.7K

* A-1297-679-A A BOARD, COMPLETE (KV-9PT60)

* A-1297-680-A A BOARD, COMPLETE (KV-9PT50)

1-923-507-59 WIRE UL1007 AWG24 30MM BLK

1-923-507-60 WIRE UL1007 AWG24 60MM BLK

4-053-413-01 CASE (LOWER), A SHIELD

4-053-414-01 CASE (UPPER), A SHIELD

4-382-854-11 SCREW (M3X10), P, SW (+)

<CAPACITOR>

C004	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C006	1-163-239-11	CERAMIC CHIP 33PF	5%	50V
C008	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C010	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C011	1-163-239-11	CERAMIC CHIP 33PF	5%	50V
C012	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C013	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C014	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C015	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C016	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C017	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C019	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C020	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C021	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V
C023	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C024	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C025	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C027	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C029	1-163-007-11	CERAMIC CHIP 680PF	10%	50V
C030	1-163-125-00	CERAMIC CHIP 220PF	5%	50V

REF. NO.	PART NO.	DESCRIPTION	REMARK
C032	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C033	1-126-933-11	ELECT 100MF	20% 10V
C034	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C035	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C036	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C037	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C038	1-126-935-11	ELECT 470MF	20% 16V
C040	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C041	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
C042	1-124-903-11	ELECT 1MF	20% 50V
C043	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C047	1-102-110-00	CERAMIC 220PF	10% 50V
C048	1-102-110-00	CERAMIC 220PF	10% 50V
C101	1-126-963-11	ELECT 4.7MF	20% 50V
C201	1-126-933-11	ELECT 100MF	20% 16V
C202	1-126-964-11	ELECT 10MF	20% 50V
C203	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C204	1-126-967-11	ELECT 47MF	20% 16V
C205	1-126-964-11	ELECT 10MF	20% 50V
C206	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C207	1-124-903-11	ELECT 1MF	20% 50V
C208	1-124-903-11	ELECT 1MF	20% 50V
C209	1-124-903-11	ELECT 1MF	20% 50V
C210	1-126-963-11	ELECT 4.7MF	20% 50V
C211	1-126-935-11	ELECT 470MF	20% 16V
C212	1-126-942-61	ELECT 1000MF	20% 25V
C213	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C214	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C217	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C301	1-137-399-11	FILM 0.1MF	5% 50V
C303	1-126-935-11	ELECT 470MF	20% 16V
C304	1-126-964-11	ELECT 10MF	20% 50V
C305	1-124-903-11	ELECT 1MF	20% 50V
C306	1-163-035-00	CERAMIC CHIP 0.047MF	50V
C307	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C308	1-124-902-00	ELECT 0.47MF	20% 50V
C309	1-163-099-00	CERAMIC CHIP 18PF	5% 50V
C310	1-126-965-11	ELECT 22MF	20% 50V
C311	1-130-489-00	FILM 0.033MF	5% 50V
C312	1-130-489-00	FILM 0.033MF	5% 50V
C313	1-130-489-00	FILM 0.033MF	5% 50V
C314	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C315	1-126-934-11	ELECT 220MF	20% 16V
C318	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
C319	1-124-902-00	ELECT 0.47MF	20% 50V
C320	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C321	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C322	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C323	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
C324	1-124-903-11	ELECT 1MF	20% 50V
C325	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C326	1-137-370-11	FILM 0.01MF	5% 50V
C327	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
C328	1-124-902-00	ELECT 0.47MF	20% 50V
C329	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C330	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C332	1-136-169-00	FILM 0.22MF	5% 50V
C333	1-136-169-00	FILM 0.22MF	5% 50V
C334	1-137-372-11	FILM 0.022MF	5% 50V
C335	1-124-903-11	ELECT 1MF	20% 50V
C336	1-126-964-11	ELECT 10MF	20% 50V
C341	1-124-902-00	ELECT 0.47MF	20% 50V
C342	1-163-037-11	CERAMIC CHIP 0.022MF	10% 50V
C345	1-126-933-11	ELECT 100MF	20% 16V
C347	1-126-933-11	ELECT 100MF	20% 16V
C348	1-163-129-00	CERAMIC CHIP 330PF	5% 50V
C401	1-126-934-11	ELECT 220MF	20% 16V
C402	1-124-903-11	ELECT 1MF	20% 50V
C403	1-124-902-00	ELECT 0.47MF	20% 50V
C406	1-128-551-11	ELECT 22MF	20% 25V

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C407	1-128-551-11	ELECT 22MF 20%	25V	C631	1-104-664-11	ELECT 47MF 20%	25V
C408	1-126-964-11	ELECT 10MF 20%	50V	C632	1-126-971-11	ELECT 470MF 20%	50V
C410	1-163-251-11	CERAMIC CHIP 100PF 5%	50V	C633	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C413	1-163-009-11	CERAMIC CHIP 0.001MF 10%	50V	C634	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C418	1-163-031-11	CERAMIC CHIP 0.01MF	50V	C635	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C501	Δ 1-108-421-91	MYLAR 0.01MF 10%	200V	C636	Δ 1-113-937-91	ELECT 0.0022MF	125V
C502	1-104-799-11	ELECT 22MF 20%	50V	C637	1-164-644-11	CERAMIC 330PF 10%	500V
C503	1-163-003-11	CERAMIC CHIP 330PF 10%	50V	C638	Δ 1-113-937-91	ELECT 0.0022MF	125V
C504	1-130-489-00	FILM 0.033MF 5%	50V	C639	1-113-941-11	ELECT 0.0047MF	125V
C505	1-163-239-11	CERAMIC CHIP 33PF 5%	50V	C641	1-129-718-00	FILM 0.022MF 5%	630V
C507	1-102-038-00	CERAMIC 0.001MF	500V	<CONNECTOR>			
C508	1-102-038-00	CERAMIC 0.001MF	500V	CN202	1-564-505-11	PLUG, CONNECTOR 2P	
C509	1-126-804-11	ELECT 100MF 20%	35V	CN401	* 1-560-124-00	PLUG, CONNECTOR (2.5MM) 4P	
C510	1-137-375-11	FILM 0.068MF 5%	50V	CN501	* 1-508-766-00	PIN, CONNECTOR (5mm PITCH) 4P	
C511	1-126-963-11	ELECT 4.7MF 20%	50V	CN601	* 1-580-843-11	PIN, CONNECTOR (POWER) (KV-9PT60)	
C512	1-164-232-11	CERAMIC CHIP 0.01MF 10%	50V	CN602	1-508-786-00	PIN, CONNECTOR (5mm PITCH) 2P	
C513	1-107-929-11	ELECT 10MF 20%	50V	CN603	1-508-786-00	PIN, CONNECTOR (5mm PITCH) 2P	
C514	1-104-664-11	ELECT 47MF 20%	25V	CN605	* 1-774-813-11	CONNECTOR, BOARD TO BOARD 7P	(KV-9PT60)
C515	1-128-528-11	ELECT 470MF 20%	16V	CN606	1-766-921-11	CONNECTOR, BOARD TO BOARD 10P	(KV-9PT60)
C516	1-102-228-00	CERAMIC 470PF 10%	500V	<DIODE>			
C517	Δ 1-108-421-91	MYLAR 0.01MF 10%	200V	D001	8-719-045-18	DIODE LN021616PH	
C518	1-107-913-11	ELECT 470MF 20%	50V	D003	8-719-911-19	DIODE 1SS119-25	
C519	1-102-228-00	CERAMIC 470PF 10%	500V	D201	8-719-110-72	DIODE RD30ESB2	
C520	1-107-652-11	ELECT 10MF 20%	250V	D302	8-719-109-84	DIODE RD5.1ESB1	
C521	1-102-228-00	CERAMIC 470PF 10%	500V	D303	8-719-105-99	DIODE RD6.2M-B1	
C522	1-111-119-11	ELECT 330MF 20%	50V	D304	8-719-105-99	DIODE RD6.2M-B1	
C523	1-104-493-11	FILM 2.7MF 3%	100V	D305	8-719-105-99	DIODE RD6.2M-B1	
C524	1-106-359-00	MYLAR 0.0047MF 10%	100V	D402	8-719-110-17	DIODE RD10ESB2	
C525	1-106-383-00	MYLAR 0.047MF 10%	100V	D403	8-719-911-19	DIODE 1SS119-25	
C527	1-104-799-11	ELECT 22MF 20%	50V	D410	8-719-110-17	DIODE RD10ESB2	
C528	1-107-635-11	ELECT 4.7MF 20%	160V	D501	8-719-908-03	DIODE GP08D	
C530	1-104-664-11	ELECT 47MF 20%	25V	D502	8-719-908-03	DIODE GP08D	
C531	1-104-664-11	ELECT 47MF 20%	25V	D503	8-719-911-19	DIODE 1SS119-25	
C554	Δ 1-115-405-11	FILM 0.039MF 3%	1KV	D504	8-719-302-43	DIODE EL1Z	
C555	Δ 1-162-116-91	CERAMIC 680PF 10%	2KV	D505	8-719-911-19	DIODE 1SS119-25	
C558	1-106-355-12	MYLAR 0.0033MF 10%	100V	D506	8-719-110-08	DIODE RD8.2ESB2	
C559	1-162-115-00	CERAMIC 330PF 10%	2KV	D507	8-719-911-19	DIODE 1SS119-25	
C575	1-107-904-11	ELECT 3.3MF 20%	50V	D508	8-719-300-33	DIODE RU-3AM	
C579	1-106-379-12	MYLAR 0.033MF 10%	100V	D509	8-719-302-43	DIODE EL1Z	
C601	Δ 1-113-937-91	ELECT 0.0022MF	125V	D510	8-719-302-43	DIODE EL1Z	
C602	1-104-706-11	FILM 0.22MF 20%	250V	D512	8-719-302-43	DIODE EL1Z	
C603	1-104-706-11	FILM 0.22MF 20%	250V	D514	8-719-911-19	DIODE 1SS119-25	
C604	1-124-902-00	ELECT 0.47MF 20%	50V	D601	8-719-911-19	DIODE 1SS119-25	
C605	Δ 1-113-937-91	ELECT 0.0022MF	125V	D602	8-719-911-19	DIODE 1SS119-25	
C606	1-126-941-11	ELECT 470MF 20%	25V	D603	8-719-911-19	DIODE 1SS119-25	
C607	1-104-664-11	ELECT 47MF 20%	25V	D604	8-719-200-82	DIODE 11ES2	
C608	1-163-038-91	CERAMIC CHIP 0.1MF	25V	D605	8-719-200-82	DIODE 11ES2	
C609	1-115-434-11	ELECT 220MF 20%	200V	D606	8-719-200-82	DIODE 11ES2	
C610	1-164-646-11	CERAMIC 2200PF 10%	500V	D607	8-719-200-82	DIODE 11ES2	
C611	1-164-646-11	CERAMIC 2200PF 10%	500V	D608	8-719-911-19	DIODE 1SS119-25	
C612	1-136-171-00	FILM 0.33MF 5%	50V	D609	8-719-911-19	DIODE 1SS119-25	
C613	1-136-169-00	FILM 0.22MF 5%	50V	D610	8-719-911-19	DIODE 1SS119-25	
C614	1-136-171-00	FILM 0.33MF 5%	50V	D611	8-719-058-90	DIODE D1NL20-TR2	
C615	1-136-169-00	FILM 0.22MF 5%	50V	D612	8-719-109-90	DIODE RD5.6ESB3	
C616	1-164-645-11	CERAMIC 1000PF 10%	500V	D613	8-719-058-90	DIODE D1NL20-TR2	
C617	1-126-964-11	ELECT 10MF 20%	50V	D614	8-719-032-12	DIODE D1NS6	
C618	1-130-489-00	FILM 0.033MF 5%	50V	D615	8-719-032-12	DIODE D1NS6	
C619	1-163-009-11	CERAMIC CHIP 0.001MF 10%	50V	D616	8-719-911-19	DIODE 1SS119-25	
C620	1-164-646-11	CERAMIC 2200PF 10%	500V	D617	8-719-911-19	DIODE 1SS119-25 (KV-9PT60)	
C621	1-164-646-11	CERAMIC 2200PF 10%	500V	D618	8-719-911-19	DIODE 1SS119-25 (KV-9PT60)	
C622	1-165-127-11	CERAMIC 470PF 10%	500V	D619	8-719-058-08	DIODE RD51F-T7B	
C623	1-165-127-11	CERAMIC 470PF 10%	500V	D620	8-719-510-02	DIODE D1NS4 (KV-9PT60)	
C624	1-164-644-11	CERAMIC 330PF 10%	500V	D621	8-719-911-19	DIODE 1SS119-25	
C625	1-126-940-11	ELECT 330MF 20%	25V	D622	8-719-200-62	DIODE 20E2H (KV-9PT60)	
C626	1-126-965-11	ELECT 22MF 20%	50V				
C627	1-126-971-11	ELECT 470MF 20%	50V				
C628	1-104-664-11	ELECT 47MF 20%	25V				
C629	1-137-399-11	FILM 0.1MF 5%	50V				
C630	1-126-965-11	ELECT 22MF 20%	50V				

A

REF. NO.	PART NO.	DESCRIPTION	REMARK
D623	8-719-058-90	DIODE D1NL20-TR2 (KV-9PT60)	
<FUSE>			
F601	1-533-420-11	FUSE, GLASS, CYLINDRICAL (DIA 5.5A/125V)	
	1-533-223-11	HOLDER, FUSE; F601	
<FERRITE BEAD>			
FB001	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB003	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB501	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB601	1-412-911-11	INDUCTOR, FERRITE BEAD	
FB602	1-412-911-11	INDUCTOR, FERRITE BEAD	
FB603	1-412-911-11	INDUCTOR, FERRITE BEAD	
FB604	1-412-911-11	INDUCTOR, FERRITE BEAD	
FB605	1-412-911-11	INDUCTOR, FERRITE BEAD (KV-9PT60)	
FB606	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB607	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB608	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB609	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB610	1-412-911-11	INDUCTOR, FERRITE BEAD	
<IC>			
IC101	8-752-871-83	IC CXP85112B-638S	
IC102	8-759-354-28	IC ST24C02FM6TR	
IC103	8-747-905-11	RAY CATCHER ELEMENT SBX1790-51	
IC201	8-759-365-39	IC TDA7267	
IC202	8-759-168-20	IC TA78L09S	
IC301	8-752-057-68	IC CXA1464AS	
IC401	8-759-300-71	IC HD14053BFP	
IC501	8-759-801-98	IC LA7830	
IC502	8-759-252-53	IC RC4558PS-E20	
IC601	8-759-198-31	IC uPC1093J-1-T	
IC602	8-759-054-12	IC PQ09RA1	
IC603	8-759-805-37	IC L78LR05D-MA	
<JACK>			
J251	1-568-267-21	JACK	
J401	1-695-239-11	JACK BLOCK, PIN 2P	
J601	1-750-523-11	JACK, DC (KV-9PT60)	
<COIL>			
L002	1-408-413-00	INDUCTOR 22UH	
L004	1-408-413-00	INDUCTOR 22UH	
L202	1-410-470-11	INDUCTOR 10UH	
L203	1-408-413-00	INDUCTOR 22UH	
L301	1-410-478-11	INDUCTOR 47UH	
L502	1-408-419-00	INDUCTOR 68UH	
L503	1-412-525-61	INDUCTOR 10UH	
L505	1-411-764-11	COIL, VAR FERRITE (HWC)	
L601	1-412-529-21	INDUCTOR 22UH	
L602	1-410-470-11	INDUCTOR 10UH	
L603	1-412-529-11	INDUCTOR 22UH	
<TRANSISTOR>			
Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
Q002	8-729-216-22	TRANSISTOR 2SA1162-G	
Q003	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q201	8-729-900-53	TRANSISTOR DTC114EK	
Q202	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q301	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q401	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q402	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q408	8-729-422-27	TRANSISTOR 2SD601A-Q	

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
Q410	8-729-216-22	TRANSISTOR 2SA1162-G	
Q412	8-729-216-22	TRANSISTOR 2SA1162-G	
Q504	8-729-105-08	TRANSISTOR 2SA1330-O6	
Q550	8-729-195-82	TRANSISTOR 2SC2958	
Q551	8-729-034-87	TRANSISTOR 2SC4161MN-RA11	
Q554	8-729-216-22	TRANSISTOR 2SA1162-G	
Q555	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q602	8-729-025-77	TRANSISTOR 2SC4663NPR-F	
Q603	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
Q604	8-729-024-65	TRANSISTOR 2SB733-34	
Q605	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q606	8-729-422-27	TRANSISTOR 2SD601A-Q (KV-9PT60)	
Q607	8-729-926-17	TRANSISTOR 2SD1292-R-T103	
Q609	8-729-025-77	TRANSISTOR 2SC4663NPR-F	
<RESISTOR>			
R001	1-216-295-91	CONDUCTOR, CHIP	
R002	1-216-295-91	CONDUCTOR, CHIP	
R003	1-216-033-00	METAL GLAZE 220	5% 1/10W
R004	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R005	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R007	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R008	1-216-033-00	METAL GLAZE 220	5% 1/10W
R009	1-216-033-00	METAL GLAZE 220	5% 1/10W
R010	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R012	1-216-033-00	METAL GLAZE 220	5% 1/10W
R013	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R014	1-216-033-00	METAL GLAZE 220	5% 1/10W
R015	1-216-033-00	METAL GLAZE 220	5% 1/10W
R016	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R018	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R019	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R020	1-216-069-00	METAL GLAZE 6.8K	5% 1/10W
R021	1-216-045-00	METAL GLAZE 680	5% 1/10W
R022	1-216-047-91	METAL GLAZE 820	5% 1/10W
R023	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R024	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R025	1-216-033-00	METAL GLAZE 220	5% 1/10W
R026	1-216-033-00	METAL GLAZE 220	5% 1/10W
R027	1-216-033-00	METAL GLAZE 220	5% 1/10W
R028	1-412-006-31	INDUCTOR CHIP 10UH	
R029	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R031	1-216-061-00	METAL GLAZE 3.3K	5% 1/10W
R032	1-216-033-00	METAL GLAZE 220	5% 1/10W
R033	1-216-033-00	METAL GLAZE 220	5% 1/10W
R034	1-216-295-91	CONDUCTOR, CHIP	
R035	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R036	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R037	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R039	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R041	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R042	1-216-033-00	METAL GLAZE 220	5% 1/10W
R044	1-216-033-00	METAL GLAZE 220	5% 1/10W
R045	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R046	1-216-033-00	METAL GLAZE 220	5% 1/10W
R047	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R048	1-216-025-91	METAL GLAZE 100	5% 1/10W
R049	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R050	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R052	1-216-041-00	METAL GLAZE 470	5% 1/10W
R054	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R055	1-216-033-00	METAL GLAZE 220	5% 1/10W
R056	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R057	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R058	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R061	1-216-045-00	METAL GLAZE 680	5% 1/10W
R062	1-216-097-91	METAL GLAZE 100K	5% 1/10W
R063	1-216-121-91	METAL GLAZE 1M	5% 1/10W
R064	1-216-073-00	METAL GLAZE 10K	5% 1/10W

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• The components identified by Δ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R065	1-216-073-00	METAL GLAZE 10K	5%	R427	1-216-097-91	METAL GLAZE 100K	5%
R067	1-216-065-00	METAL GLAZE 4.7K	5%	R430	1-216-061-00	METAL GLAZE 3.3K	5%
Δ R069	Δ 1-216-107-00	METAL GLAZE 270K	5%	R432	1-216-049-91	METAL GLAZE 1K	5%
R101	1-216-073-00	METAL GLAZE 10K	5%	R435	1-216-057-00	METAL GLAZE 2.2K	5%
R201	1-216-049-91	METAL GLAZE 1K	5%	R436	1-216-057-00	METAL GLAZE 2.2K	5%
R202	1-216-061-00	METAL GLAZE 3.3K	5%	R442	1-216-033-00	METAL GLAZE 220	5%
R203	1-216-434-11	METAL OXIDE 1.8K	5%	R502	1-249-417-11	CARBON 1K	5%
R204	1-216-081-00	METAL GLAZE 22K	5%	R504	1-216-073-00	METAL GLAZE 10K	5%
R205	1-216-061-00	METAL GLAZE 3.3K	5%	R506	1-249-415-11	CARBON 680	5%
R206	1-216-689-11	METAL GLAZE 39K	5%	R508	1-216-049-91	METAL GLAZE 1K	5%
R207	1-216-083-00	METAL GLAZE 27K	5%	R509	1-216-101-00	METAL GLAZE 150K	5%
R208	1-216-065-00	METAL GLAZE 4.7K	5%	R510	1-249-420-11	CARBON 1.8K	5%
R209	1-216-069-00	METAL GLAZE 6.8K	5%	R511	1-216-089-91	METAL GLAZE 47K	5%
R210	1-216-057-00	METAL GLAZE 2.2K	5%	R512	1-208-806-11	METAL CHIP 10K	0.50%
R211	1-216-049-91	METAL GLAZE 1K	5%	R513	1-216-645-11	METAL CHIP 560	0.50%
R212	Δ 1-249-389-91	CARBON 4.7	5%	R515	1-208-806-11	METAL CHIP 10K	0.50%
R213	1-216-049-91	METAL GLAZE 1K	5%	R516	1-216-351-00	METAL OXIDE 1.5	5%
R216	1-216-049-91	METAL GLAZE 1K	5%	R517	1-216-033-00	METAL GLAZE 220	5%
R217	1-216-089-91	METAL GLAZE 47K	5%	R518	1-216-661-11	METAL CHIP 2.7K	0.50%
R271	1-216-049-91	METAL GLAZE 1K	5%	R519	1-215-453-00	METAL 22K	1%
R272	1-216-037-00	METAL GLAZE 330	5%	R520	1-216-651-11	METAL CHIP 1K	0.50%
R273	1-216-037-00	METAL GLAZE 330	5%	R521	1-216-073-00	METAL GLAZE 10K	5%
R301	1-216-073-00	METAL GLAZE 10K	5%	R523	1-215-471-00	METAL 120K	1%
R302	1-216-025-91	METAL GLAZE 100	5%	R525	1-216-685-11	METAL CHIP 27K	0.50%
R303	1-216-033-00	METAL GLAZE 220	5%	R526	1-216-295-91	CONDUCTOR, CHIP	
R304	1-216-295-91	CONDUCTOR, CHIP		R527	1-208-814-11	METAL CHIP 22K	0.50%
R307	1-216-073-00	METAL GLAZE 10K	5%	R531	Δ 1-216-353-71	METAL OXIDE 2.2	5%
R311	1-216-678-11	METAL CHIP 13K	0.50%	R532	1-216-697-91	METAL CHIP 82K	0.50%
R312	1-216-079-00	METAL GLAZE 18K	5%	R534	1-216-697-91	METAL CHIP 82K	0.50%
R313	1-208-784-11	METAL CHIP 1.2K	0.50%	R536	1-216-667-11	METAL CHIP 4.7K	0.50%
R314	1-216-117-00	METAL GLAZE 680K	5%	R538	1-215-861-00	METAL OXIDE 47	5%
R315	1-216-295-91	CONDUCTOR, CHIP		R543	1-216-699-11	METAL CHIP 100K	0.50%
R323	1-216-121-91	METAL GLAZE 1M	5%	R544	1-208-784-11	METAL CHIP 1.2K	0.50%
R324	1-216-029-00	METAL GLAZE 150	5%	R545	1-216-081-00	METAL GLAZE 22K	5%
R325	1-216-073-00	METAL GLAZE 10K	5%	R547	1-216-073-00	METAL GLAZE 10K	5%
R326	1-216-029-00	METAL GLAZE 150	5%	R548	1-216-113-00	METAL GLAZE 470K	5%
R327	1-216-077-00	METAL GLAZE 15K	5%	R549	Δ 1-216-365-71	METAL OXIDE 0.47	5%
R328	1-216-029-00	METAL GLAZE 150	5%	R554	1-216-065-00	METAL GLAZE 4.7K	5%
R333	1-216-295-91	CONDUCTOR, CHIP		R555	1-215-890-11	METAL OXIDE 470	5%
R334	1-216-295-91	CONDUCTOR, CHIP		R557	1-216-065-00	METAL GLAZE 4.7K	5%
R336	1-216-129-00	METAL GLAZE 2.2M	5%	R558	1-216-065-00	METAL GLAZE 4.7K	5%
R338	1-216-049-91	METAL GLAZE 1K	5%	R559	1-216-049-91	METAL GLAZE 1K	5%
R339	1-249-415-11	CARBON 680	5%	R560	1-216-073-00	METAL GLAZE 10K	5%
R341	1-216-687-11	METAL CHIP 33K	0.50%	R563	1-215-860-11	METAL OXIDE 33	5%
R343	1-216-071-00	METAL GLAZE 8.2K	5%	R601	Δ 1-219-238-91	SOLID 4.7M	20%
R345	1-216-073-00	METAL GLAZE 10K	5%	R602	1-249-401-11	CARBON 47	5%
R346	1-216-069-00	METAL GLAZE 6.8K	5%	R603	1-219-785-11	WIREWOUND 2.2	5%
R347	1-216-065-00	METAL GLAZE 4.7K	5%	R604	Δ 1-260-288-71	CARBON 0.47	5%
R351	1-216-061-00	METAL GLAZE 3.3K	5%	R605	1-260-072-11	CARBON 4.7	5%
R356	1-216-049-91	METAL GLAZE 1K	5%	R606	1-247-891-00	CARBON 330K	5%
R360	1-216-041-00	METAL GLAZE 470	5%	R607	1-249-401-11	CARBON 47	5%
R365	1-249-417-11	CARBON 1K	5%	R608	1-202-719-00	SOLID 1M	20%
R367	1-216-109-00	METAL GLAZE 330K	5%	R609	1-247-891-00	CARBON 330K	5%
R401	1-216-022-00	METAL GLAZE 75	5%	R610	1-247-891-00	CARBON 330K	5%
R402	1-216-047-91	METAL GLAZE 820	5%	R611	Δ 1-212-849-61	FUSIBLE 4.7	5%
R403	1-216-055-00	METAL GLAZE 1.8K	5%	R612	1-249-401-11	CARBON 47	5%
R404	1-216-067-00	METAL GLAZE 5.6K	5%	R613	1-249-401-11	CARBON 47	5%
R405	1-216-097-91	METAL GLAZE 100K	5%	R614	Δ 1-249-377-91	CARBON 0.47	5%
R406	1-216-047-91	METAL GLAZE 820	5%	R619	1-260-072-11	CARBON 4.7	5%
R407	1-216-055-00	METAL GLAZE 1.8K	5%	R620	1-249-430-11	CARBON 12K	5%
R409	1-216-025-91	METAL GLAZE 100	5%	R621	1-260-099-11	CARBON 1K	5%
R410	1-216-065-00	METAL GLAZE 4.7K	5%	R622	1-216-073-00	METAL GLAZE 10K	5%
R415	1-216-089-91	METAL GLAZE 47K	5%	R623	1-249-429-11	CARBON 10K	5%
R416	1-216-033-00	METAL GLAZE 220	5%	R624	1-216-049-91	METAL GLAZE 1K	5%
R418	1-216-295-91	CONDUCTOR, CHIP		R625	1-216-073-00	METAL GLAZE 10K	5%
R419	1-216-295-91	CONDUCTOR, CHIP		R626	1-216-097-91	METAL GLAZE 100K	5%
R422	1-216-089-91	METAL GLAZE 47K	5%	R627	1-216-657-11	METAL CHIP 1.8K	0.50%
R423	1-216-081-00	METAL GLAZE 22K	5%	R628	1-249-415-11	CARBON 680	5%
R425	1-216-073-00	METAL GLAZE 10K	5%	R629		METAL CHIP 24K	5%
R426	1-216-061-00	METAL GLAZE 3.3K	5%				

• The components identified by ☒ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque ☒ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark ☒ are critical for safety. Replace only with part number specified.

A**C**

REF. NO.	PART NO.	DESCRIPTION	REMARK
R630	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R631	<input checked="" type="checkbox"/> 1-216-345-71	METAL OXIDE 0.47	5% 1W F
R632	<input checked="" type="checkbox"/> 1-249-377-91	CARBON 0.47	5% 1/4W F
R633	1-216-073-00	METAL GLAZE 10K	5% 1/10W (KV-9PT60)
R634	1-216-073-00	METAL GLAZE 10K	5% 1/10W (KV-9PT60)
R635	1-216-073-00	METAL GLAZE 10K	5% 1/10W (KV-9PT60)
R636	1-247-891-00	CARBON 330K	5% 1/4W
R639	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R640	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R644	<input checked="" type="checkbox"/> 1-216-355-71	METAL OXIDE 3.3	5% 1W F

<VARIABLE RESISTOR>

☒ RV601 ☒ 1-241-773-21 RES. ADJ. CERMET 47K

<SWITCH>

S001	1-692-431-21	SWITCH, TACTILE
S002	1-570-577-11	SWITCH, PUSH
S004	1-570-577-11	SWITCH, PUSH
S006	1-692-431-21	SWITCH, TACTILE

<TRANSFORMER>

T504	<input checked="" type="checkbox"/> 1-453-206-11	FRT ASSY. NX-1745/X4F4
T551	1-429-411-11	TRANSFORMER, HORIZONTAL DRIVE
T601	<input checked="" type="checkbox"/> 1-409-995-11	FILTER LINE
T603	<input checked="" type="checkbox"/> 1-429-433-11	TRANSFORMER, CONVERTER (PIT)
T604	<input checked="" type="checkbox"/> 1-427-864-12	TRANSFORMER, CONVERTER (PRT)

<THERMISTOR>

THP601	1-800-686-31	THERMISTOR (POSITIVE)
--------	--------------	-----------------------

<TUNER>

TU101	8-598-339-00	TUNER BTF-LA402
-------	--------------	-----------------

<VARISTOR>

VDR602	1-810-053-11	VARISTOR
--------	--------------	----------

<CRYSTAL>

X001	1-567-192-11	OSCILLATOR, CERAMIC
X301	1-760-190-41	VIBRATOR, CRYSTAL

* A-1331-511-A C BOARD, COMPLETE

4-382-854-11 SCREW (M3X10), P, SW (+)

<CAPACITOR>

C701	1-102-050-00	CERAMIC 0.01MF	500V
C703	1-162-114-00	CERAMIC 0.0047MF	2KV
C706	1-128-551-11	ELECT 22MF	20% 25V
C708	1-102-228-00	CERAMIC 470PF	10% 500V
C712	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
C732	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
C752	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
C771	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C772	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C773	1-163-005-11	CERAMIC CHIP 470PF	10% 50V

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<CONNECTOR>	
CN701	1-695-915-11	TAB (CONTACT)	
CN704	1-695-915-11	TAB (CONTACT)	

<DIODE>

D770	8-719-911-19	DIODE 1SS119-25
D771	8-719-911-19	DIODE 1SS119-25
D772	8-719-911-19	DIODE 1SS119-25
D773	8-719-911-19	DIODE 1SS119-25
D777	8-719-109-72	DIODE RD3.9ESB2
D790	8-719-911-19	DIODE 1SS119-25
D791	8-719-911-19	DIODE 1SS119-25
D792	8-719-911-19	DIODE 1SS119-25

<JACK>

J701	1-526-958-71	SOCKET, PICTURE TUBE
------	--------------	----------------------

<COIL>

L701	1-410-478-11	INDUCTOR 47UH
------	--------------	---------------

<TRANSISTOR>

Q711	8-729-326-11	TRANSISTOR 2SC2611
Q731	8-729-326-11	TRANSISTOR 2SC2611
Q751	8-729-326-11	TRANSISTOR 2SC2611
Q770	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q771	8-729-200-17	TRANSISTOR 2SA1091-O
Q772	8-729-200-17	TRANSISTOR 2SA1091-O
Q773	8-729-200-17	TRANSISTOR 2SA1091-O

<RESISTOR>

R700	1-260-087-11	CARBON 100	5%	1/2W
R701	1-260-135-11	CARBON 1M	5%	1/2W
R703	1-260-103-11	CARBON 2.2K	5%	1/2W
R704	<input checked="" type="checkbox"/> 1-216-398-71	METAL OXIDE 5.6	5%	3W F
R710	1-260-103-11	CARBON 2.2K	5%	1/2W
R711	1-216-025-91	METAL GLAZE 100	5%	1/10W
R712	1-215-898-11	METAL OXIDE 10K	5%	2W F
R714	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R716	1-216-037-00	METAL GLAZE 330	5%	1/10W
R730	1-260-103-11	CARBON 2.2K	5%	1/2W
R731	1-216-025-91	METAL GLAZE 100	5%	1/10W
R732	1-215-898-11	METAL OXIDE 10K	5%	2W F
R734	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R736	1-216-035-00	METAL GLAZE 270	5%	1/10W
R750	1-260-103-11	CARBON 2.2K	5%	1/2W
R751	1-216-025-91	METAL GLAZE 100	5%	1/10W
R752	1-215-898-11	METAL OXIDE 10K	5%	2W F
R754	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R756	1-216-035-00	METAL GLAZE 270	5%	1/10W
R770	1-247-881-00	CARBON 120K	5%	1/4W
R774	1-249-437-11	CARBON 47K	5%	1/4W
R775	1-249-417-11	CARBON 1K	5%	1/4W
R776	1-247-815-91	CARBON 220	5%	1/4W
R790	1-216-041-00	METAL GLAZE 470	5%	1/10W
R791	1-216-041-00	METAL GLAZE 470	5%	1/10W

MISCELLANEOUS

☒ 1-411-754-11 COIL, DEMAGNETIC
1-452-760-11 NECK ASSEMBLY (NA221)
1-505-226-11 SPEAKER (8CM)
☒ 1-526-985-11 INLET 2P (KV-9PT60)

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF. NO.	PART NO.	DESCRIPTION	REMARK
	1-766-374-11	PLUG, F-PIN	
	1-900-217-43	READ ASSY, FOCUS	
	1-900-217-44	READ ASSY, SCREEN	
Δ 8-451-450-11		DEFLECTION YOKE Y10SLA	
Δ 8-735-822-05		PICTURE TUBE 10SL (A23LDU10X)	

ACCESSORIES AND PACKING MATERIALS

- X-4033-201-1 BRACKET ASSY (KV-9PT50)
- 1-501-813-11 ANTENNA, TELESCOPIC (KV-9PT60)
- 1-501-813-21 ANTENNA, TELESCOPIC (KV-9PT50)
- 1-574-085-11 CORD, POWER (KV-9PT60)
- 1-751-198-21 CORD, CAR BATTERY (KV-9PT60)
- 1-776-846-11 CORD, POWER (KV-9PT50)
- 3-701-627-00 BAG, POLYETHYLENE
- 3-810-578-11 MANUAL, INSTRUCTION
- 3-810-578-21 MANUAL, INSTRUCTION (Canadian Model)
- * 4-046-206-01 BAG, POLYETHYLENE
- * 4-052-136-01 INDIVIDUAL CARTON (KV-9PT50)
- * 4-052-137-01 TRAY (KV-9PT50)
- * 4-052-138-01 INDIVIDUAL CARTON (KV-9PT60)
- * 4-052-140-01 CUSHION (UPPER) (ASSY)
- * 4-052-141-01 CUSHION (LOWER) (ASSY)
- * 4-052-146-01 BAG, PROTECTION
- 4-052-214-01 FOOT (KV-9PT50)
- 4-052-216-01 SCREW (L) (M6X70) (KV-9PT50)
- 4-052-217-01 SCREW (S) (M6X40) (KV-9PT50)
- 4-052-218-01 NUT, M6 (KV-9PT50)
- 4-052-586-01 SPACER (KV-9PT50)
- 4-052-587-01 WASHER (KV-9PT50)
- * 4-053-148-01 BAG, POLYETHYLENE (KV-9PT50)
- 4-053-225-01 PALLET (KV-9PT60)
- 4-053-227-01 PALLET (KV-9PT50)
- 7-651-303-43 TAPE, PP (T=90U) (75MMX500M)
- 7-685-648-79 SCREW +BVTP 3X12 TYPE2 IT-3
(KV-9PT50)

REMOTE COMMANDER

- 1-466-966-11 REMOTE COMMANDER (RM-Y116)
(KV-9PT60)
- 9-903-826-01 POCKET, COVER (FOR RM-Y116)
(KV-9PT60)
- 1-466-966-41 REMOTE COMMANDER (RM-Y116)
(KV-9PT50)
- 9-903-826-01 POCKET, COVER (FOR RM-Y116)
(KV-9PT50)

